


KR 1000 titan, KR 1000 L750

with F variants and KR C2

Specification

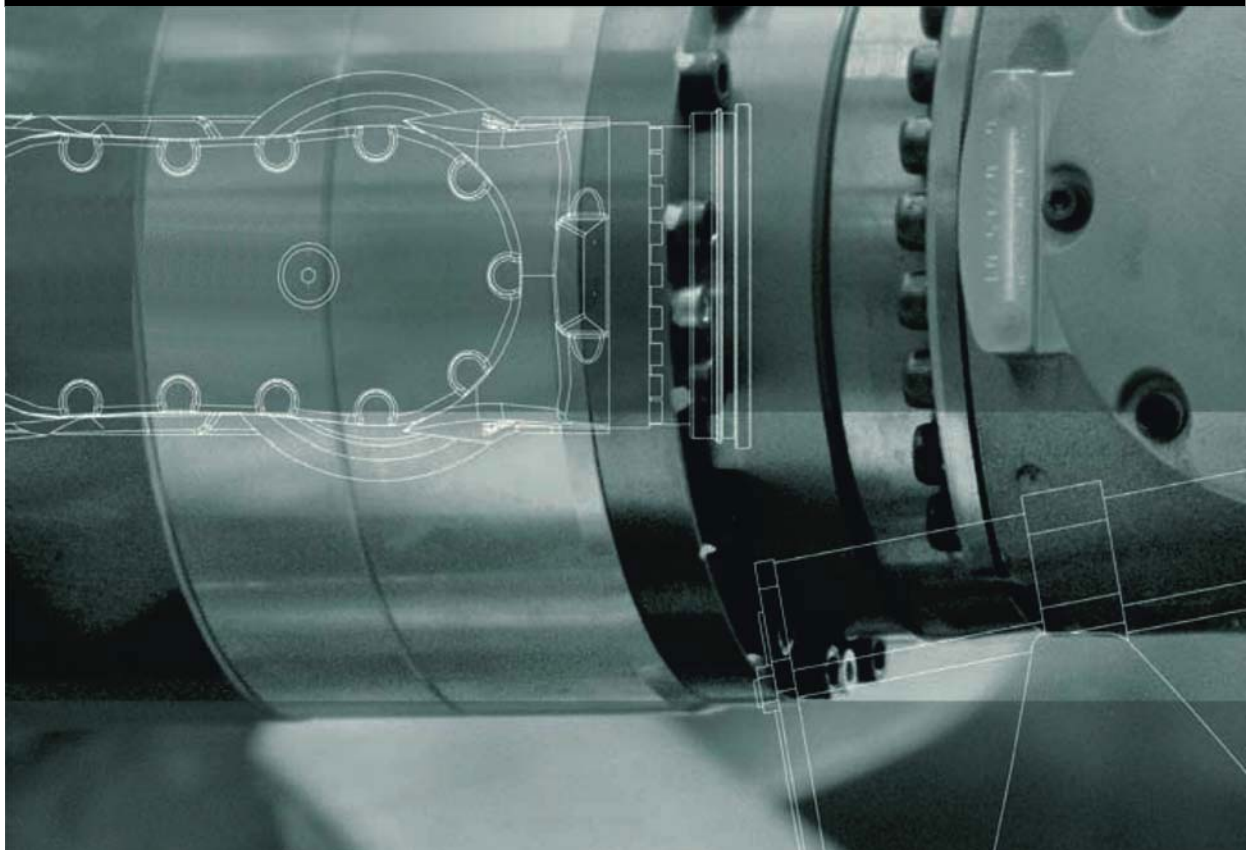

Issued: 23.05.2016

Version: Spez KR 1000 titan V8



© Copyright 2016

KUKA Roboter GmbH
Zugspitzstraße 140
D-86165 Augsburg
Germany

This documentation or excerpts therefrom may not be reproduced or disclosed to third parties without the express permission of KUKA Roboter GmbH.

Other functions not described in this documentation may be operable in the controller. The user has no claims to these functions, however, in the case of a replacement or service work.

We have checked the content of this documentation for conformity with the hardware and software described. Nevertheless, discrepancies cannot be precluded, for which reason we are not able to guarantee total conformity. The information in this documentation is checked on a regular basis, however, and necessary corrections will be incorporated in the subsequent edition.

Subject to technical alterations without an effect on the function.

Translation of the original documentation

KIM-PS5-DOC

Publication:	Pub Spez KR 1000 titan en
Book structure:	Spez KR 1000 titan V7.2
Version:	Spez KR 1000 titan V8

Contents

1	Introduction	5
1.1	Industrial robot documentation	5
1.2	Representation of warnings and notes	5
2	Purpose	7
2.1	Target group	7
2.2	Intended use	7
3	Product description	9
3.1	Overview of the industrial robot	9
3.2	Description of the robot	9
4	Technical data	13
4.1	Basic data, KR 1000 titan	13
4.2	Basic data, KR 1000 L750 titan	15
4.3	Axis data	17
4.4	Payloads, KR 1000 titan	20
4.5	Payloads, KR 1000 L750 titan	23
4.6	Mounting base data	26
4.7	Plates and labels	27
4.8	REACH duty to communicate information acc. to Art. 33 of Regulation (EC) 1907/2006	30
4.9	Stopping distances and times	30
4.9.1	General information	30
4.9.2	Terms used	31
4.9.3	Stopping distances and times, KR 1000 titan	32
4.9.3.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 3	32
4.9.3.2	Stopping distances and stopping times for STOP 1, axis 1	33
4.9.3.3	Stopping distances and stopping times for STOP 1, axis 2	35
4.9.3.4	Stopping distances and stopping times for STOP 1, axis 3	37
4.9.4	Stopping distances and times, KR 1000 L750 titan	37
4.9.4.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 3	37
4.9.4.2	Stopping distances and stopping times for STOP 1, axis 1	38
4.9.4.3	Stopping distances and stopping times for STOP 1, axis 2	40
4.9.4.4	Stopping distances and stopping times for STOP 1, axis 3	42
5	Safety	43
5.1	General	43
5.1.1	Liability	43
5.1.2	Intended use of the industrial robot	44
5.1.3	EC declaration of conformity and declaration of incorporation	44
5.1.4	Terms used	45
5.2	Personnel	45
5.3	Workspace, safety zone and danger zone	46
5.4	Overview of protective equipment	47
5.4.1	Mechanical end stops	47
5.4.2	Mechanical axis range limitation (optional)	47
5.4.3	Axis range monitoring (optional)	47
5.4.4	Moving the manipulator without drive energy	48

5.4.4.1	Moving A1 with the release device	48
5.4.4.2	Moving A2 with the release device	49
5.4.5	Labeling on the industrial robot	49
5.5	Safety measures	50
5.5.1	General safety measures	50
5.5.2	Transportation	51
5.5.3	Start-up and recommissioning	51
5.5.4	Manual mode	53
5.5.5	Automatic mode	54
5.5.6	Maintenance and repair	54
5.5.7	Decommissioning, storage and disposal	55
5.6	Applied norms and regulations	55
6	Planning	59
6.1	Information for planning	59
6.2	Mounting base with centering	59
6.3	Machine frame mounting	62
6.4	Connecting cables and interfaces	63
7	Transportation	65
7.1	Transporting the robot	65
8	KUKA Service	71
8.1	Requesting support	71
8.2	KUKA Customer Support	71
	Index	79

1 Introduction

1.1 Industrial robot documentation

The industrial robot documentation consists of the following parts:


- Documentation for the manipulator
- Documentation for the robot controller
- Operating and programming instructions for the System Software
- Instructions for options and accessories
- Parts catalog on storage medium


Each of these sets of instructions is a separate document.


1.2 Representation of warnings and notes


Safety


These warnings are relevant to safety and **must** be observed.

 **DANGER** These warnings mean that it is certain or highly probable that death or severe injuries **will** occur, if no precautions are taken.


 **WARNING** These warnings mean that death or severe injuries **may** occur, if no precautions are taken.

 **CAUTION** These warnings mean that minor injuries **may** occur, if no precautions are taken.

 **NOTICE** These warnings mean that damage to property **may** occur, if no precautions are taken.


 These warnings contain references to safety-relevant information or general safety measures.
These warnings do not refer to individual hazards or individual precautionary measures.

This warning draws attention to procedures which serve to prevent or remedy emergencies or malfunctions:

 **SAFETY INSTRUCTIONS** Procedures marked with this warning **must** be followed exactly.

Notices

These notices serve to make your work easier or contain references to further information.

 Tip to make your work easier or reference to further information.

2 Purpose

2.1 Target group

This documentation is aimed at users with the following knowledge and skills:

- Advanced knowledge of mechanical engineering
- Advanced knowledge of electrical and electronic systems
- Knowledge of the robot controller system



For optimal use of our products, we recommend that our customers take part in a course of training at KUKA College. Information about the training program can be found at www.kuka.com or can be obtained directly from our subsidiaries.

2.2 Intended use

Use The industrial robot is intended for handling tools and fixtures, or for processing or transferring components or products. Use is only permitted under the specified environmental conditions.

Misuse Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Transportation of persons and animals
- Use as a climbing aid
- Operation outside the permissible operating parameters
- Use in potentially explosive environments
- Use in underground mining

NOTICE

Changing the structure of the manipulator, e.g. by drilling holes, etc., can result in damage to the components. This is considered improper use and leads to loss of guarantee and liability entitlements.

NOTICE

Deviations from the operating conditions specified in the technical data or the use of special functions or applications can lead to premature wear. KUKA Roboter GmbH must be consulted.



The robot system is an integral part of a complete system and may only be operated in a CE-compliant system.

3 Product description

3.1 Overview of the industrial robot

The industrial robot consists of the following components:

- Manipulator
- Robot controller
- Teach pendant
- Connecting cables
- Software
- Options, accessories

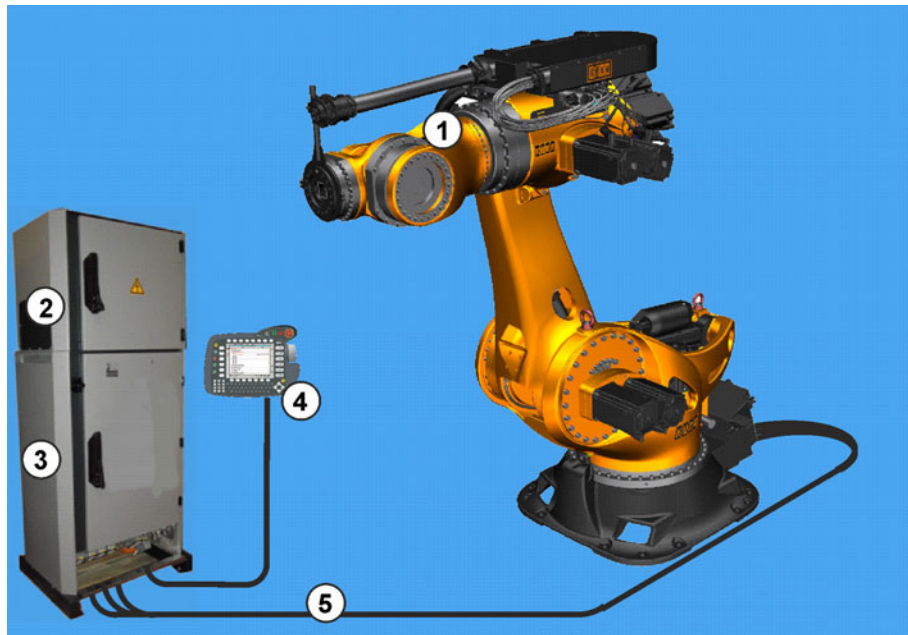


Fig. 3-1: Example of an industrial robot

- | | | | |
|---|---------------------|---|---------------------|
| 1 | Manipulator | 4 | Teach pendant (KCP) |
| 2 | Top-mounted cabinet | 5 | Connecting cables |
| 3 | Robot controller | | |

3.2 Description of the robot

Overview

The robots are designed as 6-axis jointed-arm kinematic systems. The structural components of the robot are made of iron castings.

The robot consists of the following principal components:

- In-line wrist
- Arm
- Link arm
- Rotating column
- Base frame
- Counterbalancing system
- Electrical installations

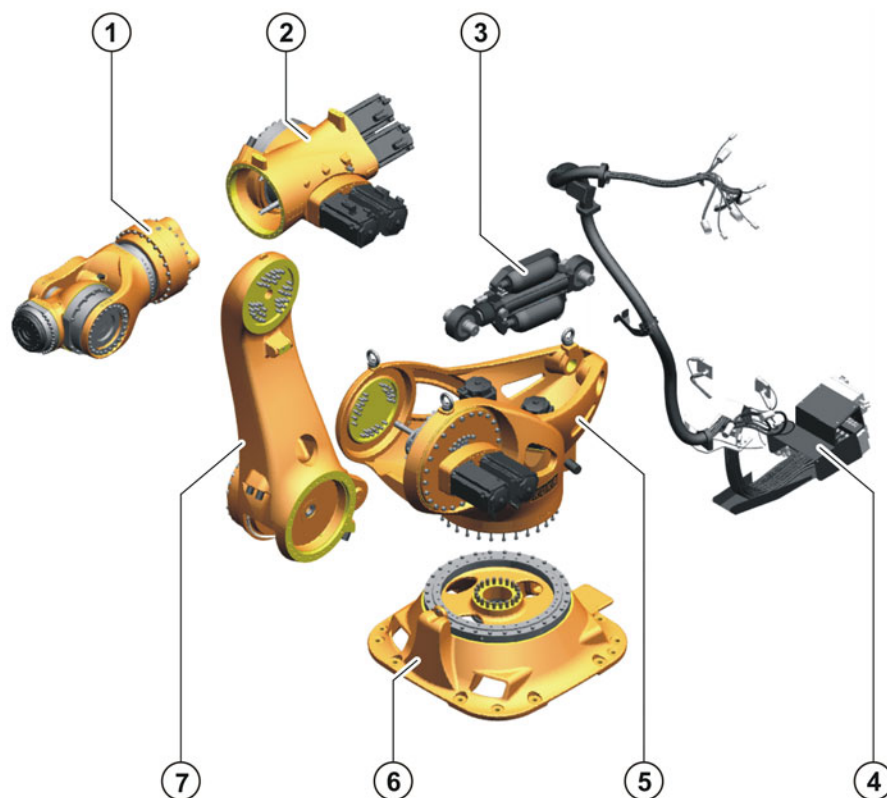


Fig. 3-2: Principal components of the KR 1000 titan

1	In-line wrist	5	Rotating column
2	Arm	6	Base frame
3	Counterbalancing system	7	Link arm
4	Electrical installations		

In-line wrist

The robot is fitted with a 3-axis in-line wrist. The in-line wrist comprises axes 4, 5 and 6. It is driven by 3 motors installed at the rear end of the arm via connecting shafts. For attaching end effectors (tools), the in-line wrist has a mounting flange. The gear units of the in-line wrist are supplied with oil from 3 separate oil chambers. The robot can be equipped with an in-line wrist for a rated payload of 1000 kg or 750 kg, depending on the variant. The in-line wrist with a rated payload of 750 kg offers a longer reach of 400 mm. Both wrist variants are also available in foundry versions.

Arm

The arm is the link between the in-line wrist and the link arm. It houses the motors of the wrist axes A4, A5 and A6 and the motors of main axis A3. The arm is driven by the 2 motors of axis 3, which drive the gear unit between the arm and the link arm via an input stage. The maximum permissible swivel angle is mechanically limited by a stop for each direction, plus and minus. The associated buffers are attached to the arm.

If the robot is operated in the foundry version, a special arm variant is employed. This arm is pressurized via a pressure regulator with compressed air, which is supplied via a compressed air line.

Link arm

The link arm is the assembly located between the arm and the rotating column. It is mounted in the rotating column with a gear unit on each side and is driven by 2 motors. The two motors engage with an input stage before driving both gear units via a shaft.

Rotating column

The rotating column houses the motors of axes 1 and 2. The rotational motion of axis 1 is performed by the rotating column. It is screwed to the base frame

via the gear unit of axis 1. The motors for driving axis 1 are mounted inside the rotating column. The bearings of the counterbalancing system are situated at the rear.

- Base frame** The base frame is the base of the robot. It is screwed to the mounting base. The interfaces for the electrical installations and the energy supply systems (accessory) are housed in the base frame. For transportation by fork lift truck, fork slots are provided on the base frame.
- Electrical installations** For this robot, two variants of the electrical installations are available, for the standard and Safe cable sets. In the standard variant, the junction boxes and the motor terminal box are mounted on the base frame. In the second variant, all the junction boxes are permanently connected to the robot via 15 m cables, allowing the robot to be connected at a distance from its site of installation. The wiring diagrams and connector pin allocation are the same for both variants.
- The electrical installations are described in Chapter .
- The remote RDC box (optional) is described in a separate documentation module.
- Counterbalancing system** The counterbalancing system is installed between the rotating column and the link arm and serves to minimize the moments generated about axis 2 when the robot is in motion and at rest. A closed, hydropneumatic system is used. The system consists of 2 diaphragm accumulators and a cylinder with associated hoses, pressure gauge and safety valve.
- When the link arm is vertical, the counterbalancing system has no effect. With increasing deflection in the plus or minus direction, the hydraulic oil is pressed into the two diaphragm accumulators, thereby generating the necessary counterforce to compensate the moment of the axis. The diaphragm accumulators are filled with nitrogen.
- Options** The robot can be fitted and operated with various options, such as energy supply systems for axes 1 to 3, energy supply systems for axes 3 to 6, or working range limitation systems. The options are described in separate documentation. The release device option is not available for this robot.

4 Technical data

4.1 Basic data, KR 1000 titan

Basic data

Type	KR 1000 titan and KR 1000 F titan
Number of axes	6
Work envelope volume	79.8 m ³
Repeatability (ISO 9283)	±0.10 mm
Work envelope reference point	Intersection of axes 4 and 5
Weight	KR 1000 titan approx. 4,690 kg KR 1000 F titan approx. 4,700 kg
Principal dynamic loads	See "Loads acting on the mounting base"
Protection rating of the robot	IP65 Ready for operation, with connecting cables plugged in (according to EN 60529)
Protection rating of the in-line wrist	IP65
Protection rating of the in-line wrist F	IP67
Sound level	< 75 dB (A) outside the working envelope
Mounting position	Floor
Surface finish, paint-work	Base (stationary): black (RAL 9005); counterbalancing system: black (RAL 9005); moving parts: KUKA orange 2567

Foundry robots

Overpressure in the arm	0.01 MPa (0.1 bar)
Compressed air	Free of oil and water Class 4 in accordance with ISO 8573-1
Compressed air supply line	Air line in the cable set
Air consumption	0.1 m ³ /h
Air line connection	Quick Star push-in fitting for hose PLN-6x1, black
Pressure regulator connection	R 1/8", internal thread
Input pressure	0.1 - 1.2 MPa (1 - 12 bar)
Pressure regulator	0.005 - 0.07 MPa (0.05 - 0.7 bar)
Manometer range	0.0 - 0.1 MPa (0.0 - 1.0 bar)
Filter gauge	25 - 30 µm
Thermal loading	10 s/min at 353 K (180 °C)
Resistance	Increased resistance to dust, lubricants, coolants and water vapor.
Special paint finish on wrist	Heat-resistant and heat-reflecting silver paint finish on the in-line wrist.

Special paint finish on the robot	Special paint finish on the entire robot, and an additional protective clear coat.
Other ambient conditions	KUKA Roboter GmbH must be consulted if the robot is to be used under other ambient conditions.

Transport dimensions

	Without buffer A2	With buffer A2
Length	2,123 mm	2,106 mm
Width	1,420 mm	1,420 mm
Height	2,371 mm	2,543 mm
	These dimensions refer to the robot only, without wooden transport blocks.	

Transport dimensions with transport frame

Length	4,000 mm
Width	1,750 mm
Height	2,191 mm
Height with lifting tackle	3,500 mm

Ambient temperature

Operation	283 K to 328 K (+10 °C to +55 °C)
Operation with Safe RDC	283 K to 323 K (+10 °C to +50 °C)
Storage and transportation	233 K to 333 K (-40 °C to +60 °C)
Start-up	283 K to 288 K (+10 °C to +15 °C) At these temperatures the robot may have to be warmed up before normal operation. Other temperature limits available on request.
Humidity rating	DIN EN 60721-3-3, Class 3K3

Connecting cables

Cable designation	Connector designation	Interface with robot
Motor cable 1	X20.1 - X30.1	Rectangular connector, size 24
Motor cable 2	X20.2 - X30.2	Rectangular connector, size 24
Motor cable 3	X20.3 - X30.3	Rectangular connector, size 24
Control cable 1, A 1/A 2	XA21 - X31.2	Circular connector M23
Control cable 2, A 1/A 2	X21.1 - X41	Circular connector M23
Safe control cable	X21 - X31	Circular connector M23
Ground conductor		Ring cable lug, 8 mm
Cable lengths		
Standard	15 m, 25 m, 35 m, 50 m	
with RoboTeam	15 m, 25 m, 35 m	
with SafeRobot	15 m, 25 m, 35 m	

For detailed specifications of the connecting cables, see (>>> 6.4 "Connecting cables and interfaces" Page 63).

If the connecting cables are longer than 25 m, a 16 mm² ground conductor must be installed.

4.2 Basic data, KR 1000 L750 titan

Basic data

Type	KR 1000 L750 titan and KR 1000 L750 F titan
Number of axes	6
Work envelope volume	122.6 m ³
Repeatability (ISO 9283)	±0.10 mm
Work envelope reference point	Intersection of axes 4 and 5
Weight	KR 1000 L750 titan approx. 4,740 kg KR 1000 L750 F titan approx. 4,750 kg
Principal dynamic loads	See "Loads acting on the mounting base"
Protection rating of the robot	IP65 Ready for operation, with connecting cables plugged in (according to EN 60529)
Protection rating of the in-line wrist	IP65
Protection rating of the in-line wrist F	IP67
Sound level	< 75 dB (A) outside the working envelope
Mounting position	Floor
Surface finish, paint-work	Base (stationary): black (RAL 9005); counterbalancing system: black (RAL 9005); moving parts: KUKA orange 2567

Foundry robots

Overpressure in the arm	0.01 MPa (0.1 bar)
Compressed air	Free of oil and water Class 4 in accordance with ISO 8573-1
Compressed air supply line	Air line in the cable set
Air consumption	0.1 m ³ /h
Air line connection	Quick Star push-in fitting for hose PLN-6x1, black
Pressure regulator connection	R 1/8", internal thread
Input pressure	0.1 - 1.2 MPa (1 - 12 bar)
Pressure regulator	0.005 - 0.07 MPa (0.05 - 0.7 bar)
Manometer range	0.0 - 0.1 MPa (0.0 - 1.0 bar)
Filter gauge	25 - 30 µm
Thermal loading	10 s/min at 353 K (180 °C)
Resistance	Increased resistance to dust, lubricants, coolants and water vapor.

Special paint finish on wrist	Heat-resistant and heat-reflecting silver paint finish on the in-line wrist.
Special paint finish on the robot	Special paint finish on the entire robot, and an additional protective clear coat.
Other ambient conditions	KUKA Roboter GmbH must be consulted if the robot is to be used under other ambient conditions.

Transport dimensions

	Without buffer A2	With buffer A2
Length	2,506 mm	2,506 mm
Width	1,420 mm	1,420 mm
Height	2,371 mm	2,543 mm
	These dimensions refer to the robot only, without wooden transport blocks.	

Transport dimensions with transport frame

Length	4,000 mm
Width	1,750 mm
Height	2,191 mm
Height with lifting tackle	3,500 mm

Ambient temperature

Operation	283 K to 328 K (+10 °C to +55 °C)
Operation with Safe RDC	283 K to 323 K (+10 °C to +50 °C)
Storage and transportation	233 K to 333 K (-40 °C to +60 °C)
Start-up	283 K to 288 K (+10 °C to +15 °C) At these temperatures the robot may have to be warmed up before normal operation. Other temperature limits available on request.
Humidity rating	DIN EN 60721-3-3, Class 3K3

Connecting cables

Cable designation	Connector designation	Interface with robot
Motor cable 1	X20.1 - X30.1	Rectangular connector, size 24
Motor cable 2	X20.2 - X30.2	Rectangular connector, size 24
Motor cable 3	X20.3 - X30.3	Rectangular connector, size 24
Control cable 1, A 1/A 2	XA21 - X31.2	Circular connector M23
Control cable 2, A 1/A 2	X21.1 - X41	Circular connector M23
Safe control cable	X21 - X31	Circular connector M23
Ground conductor		Ring cable lug, 8 mm

Cable lengths	
Standard	15 m, 25 m, 35 m, 50 m

with RoboTeam	15 m, 25 m, 35 m
with SafeRobot	15 m, 25 m, 35 m

For detailed specifications of the connecting cables, see (>>> 6.4 "Connecting cables and interfaces" Page 63).

If the connecting cables are longer than 25 m, a 16 mm² ground conductor must be installed.

4.3 Axis data

The following data are valid for the robots KR 1000 titan, KR 1000 F titan, KR 1000 L750 titan and KR 1000 L750 F titan.

Axis data

Axis	Range of motion, software-limited	Speed with rated payload
1	+/-150°	58 °/s
2	+17.5° to -130°	50 °/s
3	+145° to -110°	50 °/s
4	+/-350°	60 °/s
5	+/-118°	60 °/s
6	+/-350°	72 °/s

The direction of motion and the arrangement of the individual axes may be noted from the diagram (>>> Fig. 4-1).

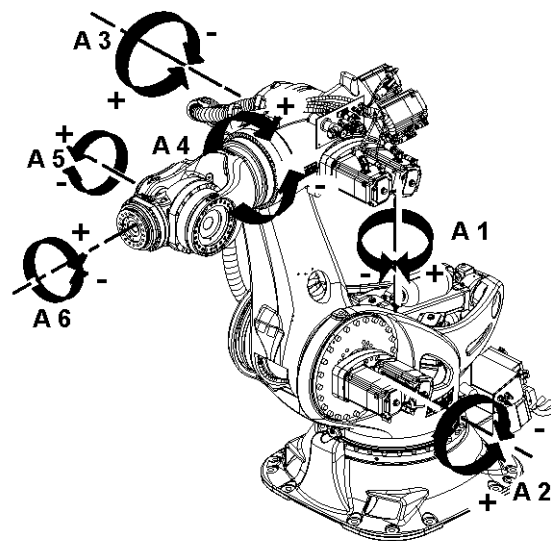


Fig. 4-1: Direction of rotation of robot axes

The diagrams (>>> Fig. 4-2) and (>>> Fig. 4-3) show the shape and size of the working envelopes.

Working envelope

Maße / Dimensions: mm

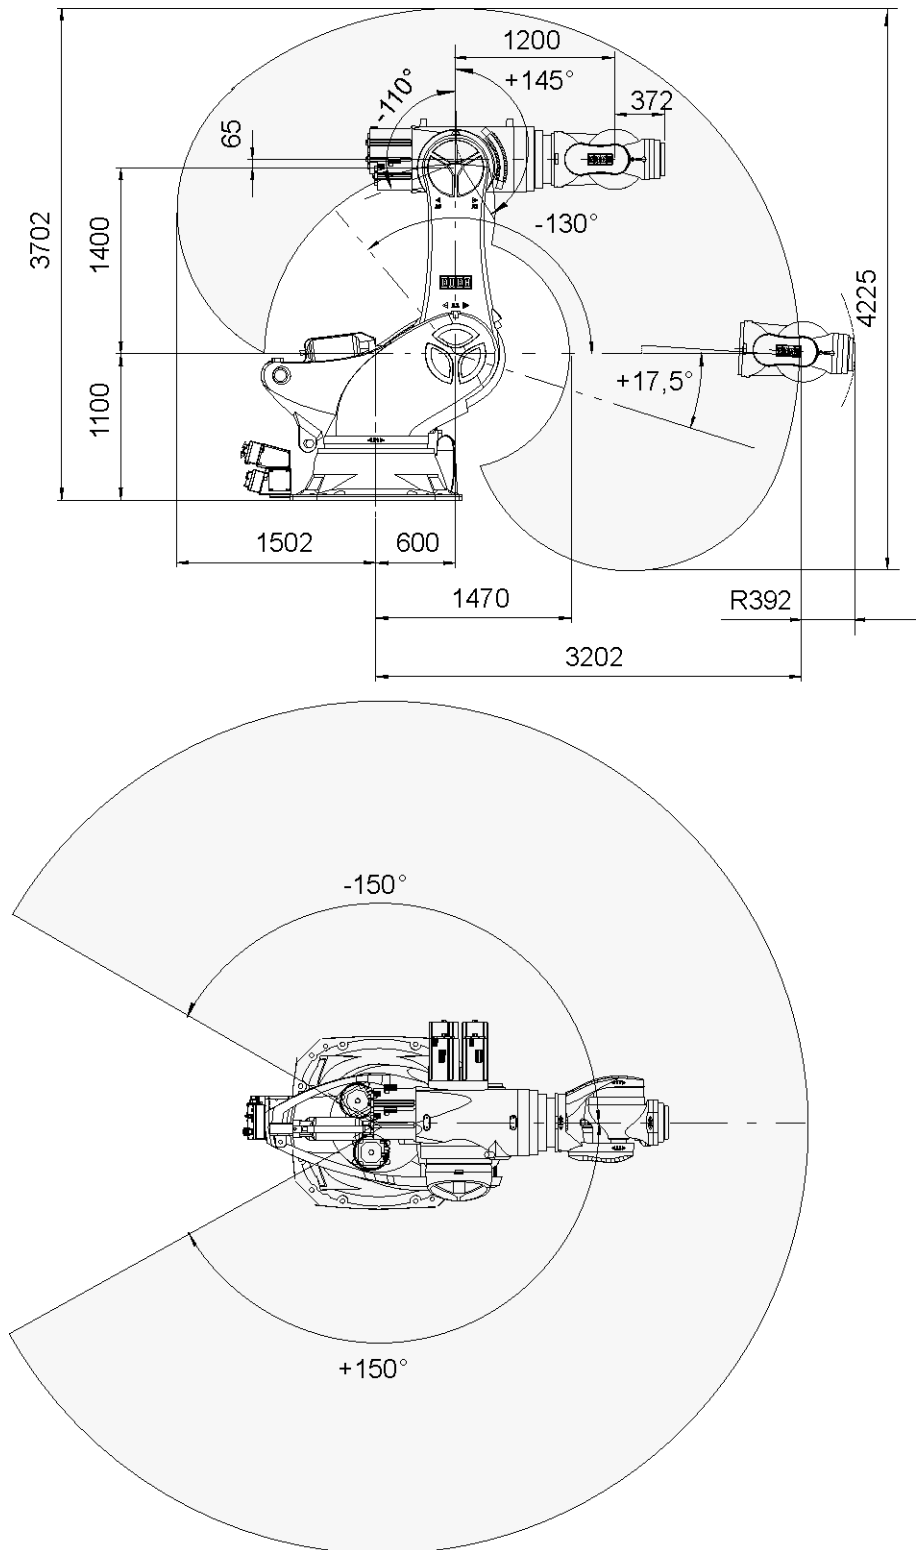


Fig. 4-2: Working envelope, KR 1000 titan

Maße / Dimensions: mm

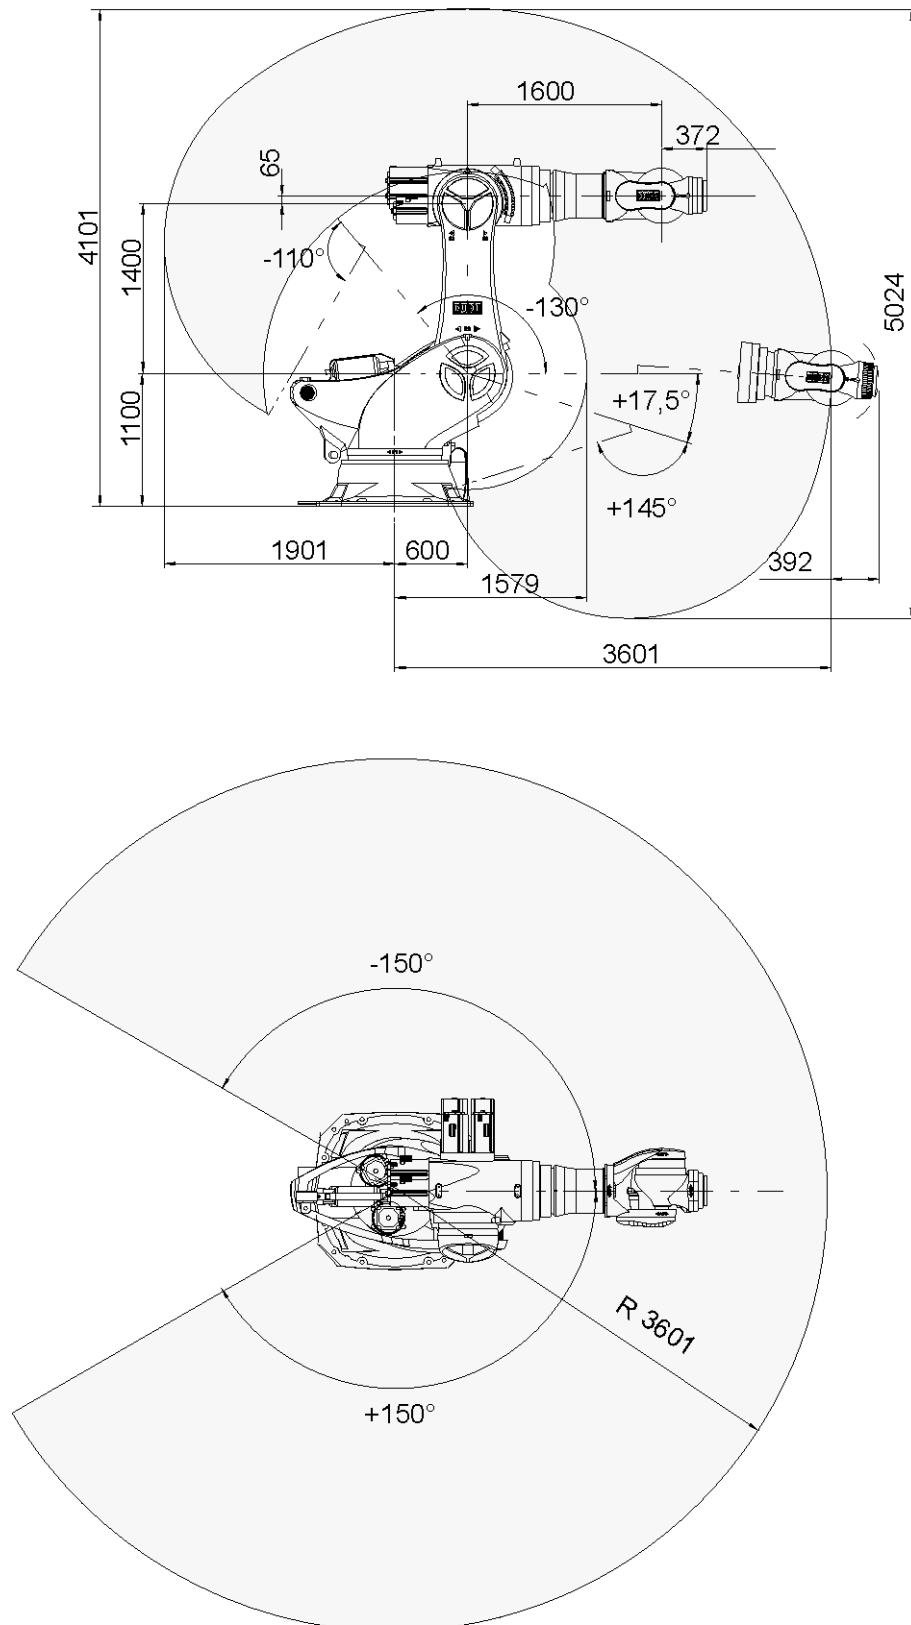


Fig. 4-3: Working envelope, KR 1000 L750 titan

The reference point for the working envelope is the intersection of axes 4 and 5.

4.4 Payloads, KR 1000 titan

Payloads

Robots	KR 1000 titan KR 1000 F titan
In-line wrist	IW 1000
Rated payload	1,000 kg
Distance of the load center of gravity L_z	400 mm
Distance of the load center of gravity L_{xy}	450 mm
Permissible moment of inertia	500 kgm ²
Max. total load	1,050 kg
Supplementary load, arm	100 kg
Supplementary load, link arm	0 kg
Supplementary load, rotating column	0 kg
Supplementary load, base frame	0 kg

Load center of gravity P

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis 6. Refer to the payload diagram for the nominal distance.

Payload diagram

NOTICE

This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case the KUKA Roboter GmbH must be consulted beforehand.

The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the KUKA System Software.

The mass inertia must be verified using KUKA.Load. It is imperative for the load data to be entered in the robot controller!

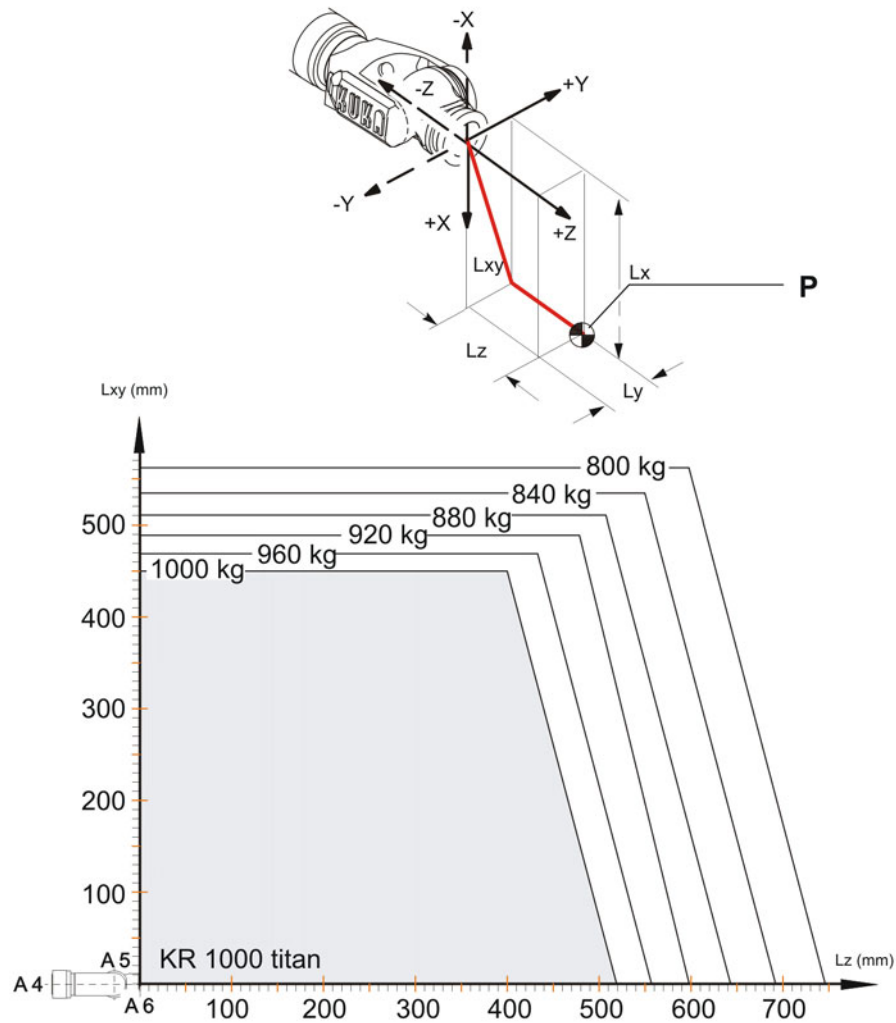


Fig. 4-4: Payload diagram for KR 1000 titan

Mounting flange

Mounting flange	similar to DIN/ISO 9409-1-A200*
Screw grade	10.9
Screw size	M16
Grip length	1.5 x nominal diameter
Depth of engagement	min. 24 mm, max. 25 mm
Locating element	12 ^{H7}

*The inner locating diameter is $\varnothing 160^{H7}$. This deviates from the standard.

The mounting flange is depicted (>>> Fig. 4-5) with axes 4 and 6 in the zero position. The symbol X_m indicates the position of the locating element (bushing) in the zero position.

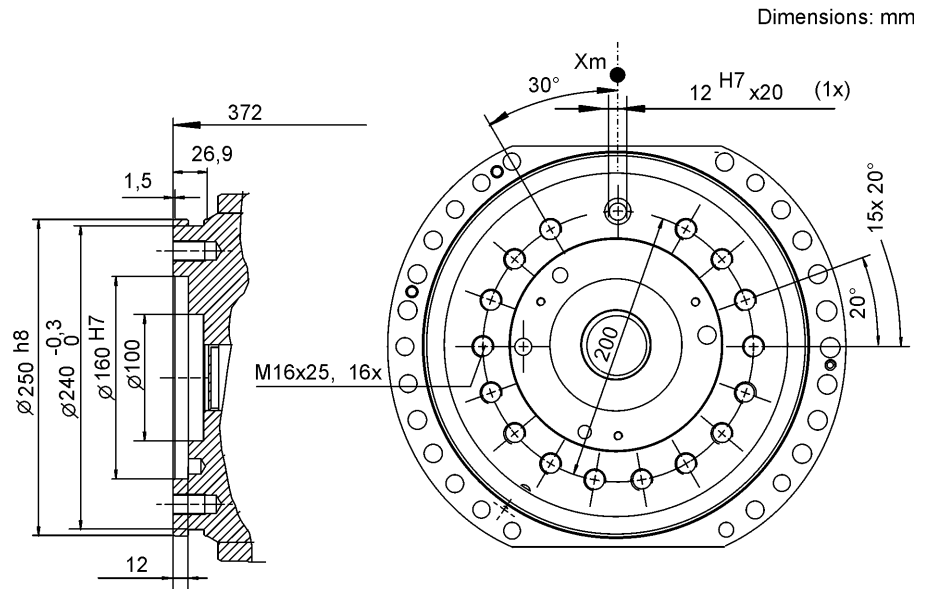


Fig. 4-5: Mounting flange

Supplementary load

The robot can carry supplementary loads on the arm. When mounting the supplementary loads, be careful to observe the maximum permissible total load. If an energy supply system A3 - A6 is used, the maximum supplementary load is reduced by the mass of the energy supply system. The dimensions and positions of the installation options can be seen in the diagram (>>> Fig. 4-6). All other threads and holes on the robot are not suitable for attaching additional loads.

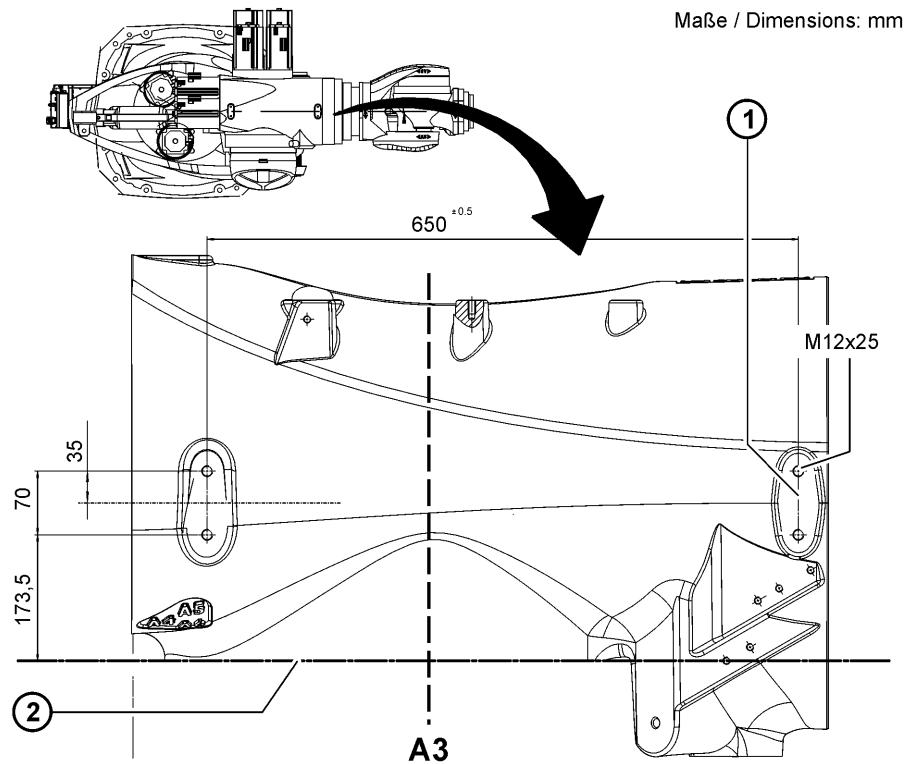


Fig. 4-6: Supplementary load, arm

4.5 Payloads, KR 1000 L750 titan

Payloads

Robots	KR 1000 L750 titan KR 1000 L750 F titan
In-line wrist	IW 750
Rated payload	750 kg
Distance of the load center of gravity L_z	400 mm
Distance of the load center of gravity L_{xy}	450 mm
Permissible moment of inertia	375 kgm ²
Max. total load	800 kg
Supplementary load, arm	100 kg
Supplementary load, link arm	0 kg
Supplementary load, rotating column	0 kg
Supplementary load, base frame	0 kg

Load center of gravity P

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis 6. Refer to the payload diagram for the nominal distance.

Payload diagram

NOTICE This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case the KUKA Roboter GmbH must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the KUKA System Software. The mass inertia must be verified using KUKA.Load. It is imperative for the load data to be entered in the robot controller!

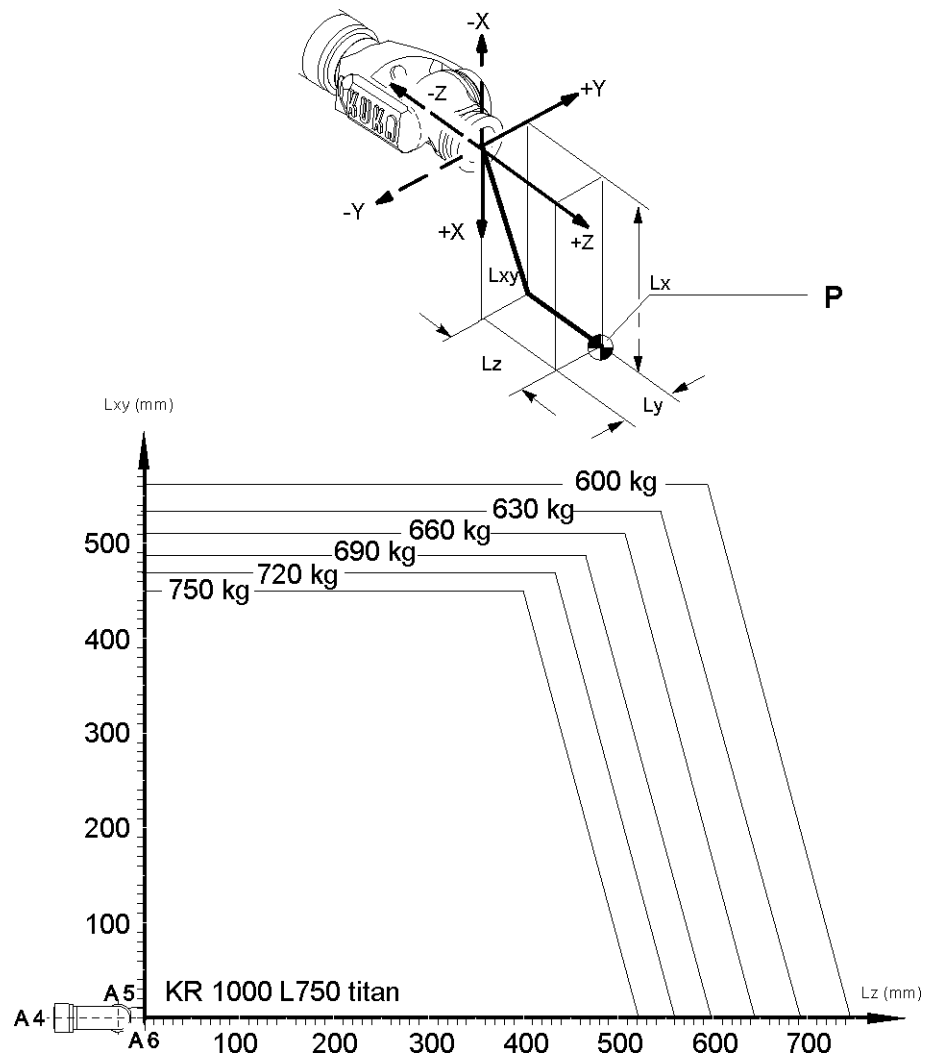


Fig. 4-7: Payload diagram for KR 1000 L750 titan

Mounting flange

Mounting flange	similar to DIN/ISO 9409-1-A200*
Screw grade	10.9
Screw size	M16
Grip length	1.5 x nominal diameter
Depth of engagement	min. 24 mm, max. 25 mm
Locating element	12 ^{H7}

*The inner locating diameter is $\varnothing 160^{H7}$. This deviates from the standard.

The mounting flange is depicted (>>> Fig. 4-8) with axes 4 and 6 in the zero position. The symbol X_m indicates the position of the locating element (bushing) in the zero position.

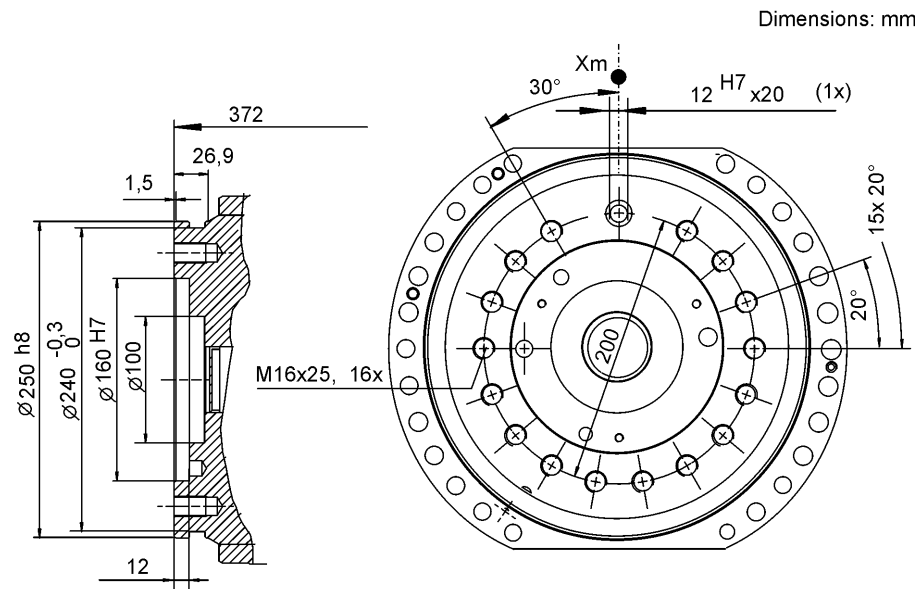


Fig. 4-8: Mounting flange

Supplementary load

The robot can carry supplementary loads on the arm. When mounting the supplementary loads, be careful to observe the maximum permissible total load. If an energy supply system A3 - A6 is used, the maximum supplementary load is reduced by the mass of the energy supply system. The dimensions and positions of the installation options can be seen in the diagram (>>> Fig. 4-9). All other threads and holes on the robot are not suitable for attaching additional loads.

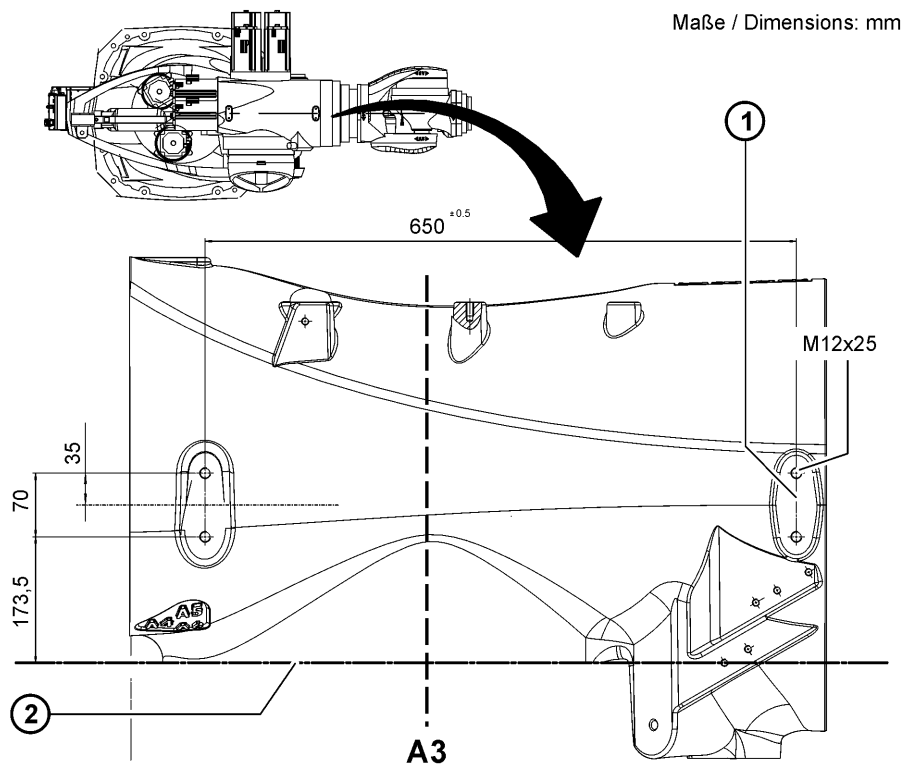


Fig. 4-9: Supplementary load, arm

4.6 Mounting base data

Loads acting on the mounting base

The specified forces and moments already include the payload and the inertia force (weight) of the robot.

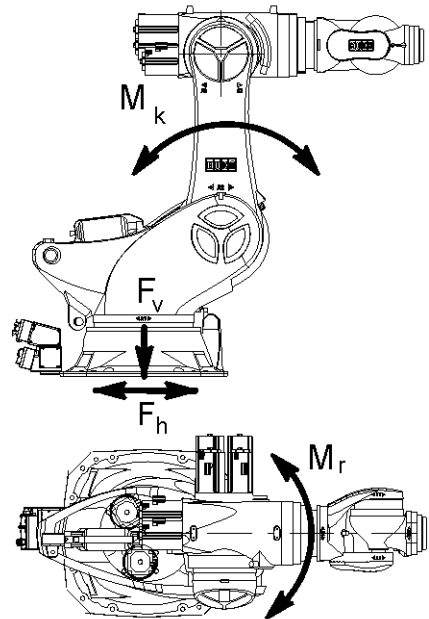


Fig. 4-10: Loads acting on the foundation

Type of load	Force/torque/mass
F_v = vertical force	$F_{v \text{ normal}} = 61,500 \text{ N}$ $F_{v \text{ max}} = 70,000 \text{ N}$
F_h = horizontal force	$F_{h \text{ normal}} = 21,400 \text{ N}$ $F_{h \text{ max}} = 35,500 \text{ N}$
M_k = tilting moment	$M_{k \text{ normal}} = 102,200 \text{ Nm}$ $M_{k \text{ max}} = 133,700 \text{ Nm}$
M_r = torque	$M_{R \text{ normal}} = 36,600 \text{ Nm}$ $M_{r \text{ max}} = 99,700 \text{ Nm}$
Total mass for load acting on the mounting base	6,000 kg
Robot	KR 1000 titan, 4,690 kg KR 1000 F titan, 4,700 kg KR 1000 L750 titan, 4,740 kg KR 1000 L750 titan F, 4,750 kg
Total load for foundation load	1,050 kg for KR 1000 titan 800 kg for KR 1000 L750 titan

⚠ WARNING Normal loads and maximum loads for the foundations are specified in the table. The maximum loads must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to observe this can result in personal injury and damage to property. The normal loads are average expected foundation loads. The actual loads are dependent on the program and on the robot loads and may therefore be greater or less than the normal loads. The supplementary loads (A1 and A2) are not taken into consideration in the calculation of the mounting base load. These supplementary loads must be taken into consideration for F_v .

Grade of concrete for foundations

When producing foundations from concrete, observe the load-bearing capacity of the ground and the country-specific construction regulations. There must be no layers of insulation or screed between the bedplates and the concrete foundation. The quality of the concrete must meet the requirements of the following standard:

- C20/25 according to DIN EN 206-1:2001/DIN 1045-2:2008

4.7 Plates and labels

Plates and labels

The following plates and labels are attached to the robot. They must not be removed or rendered illegible. Illegible plates and labels must be replaced.





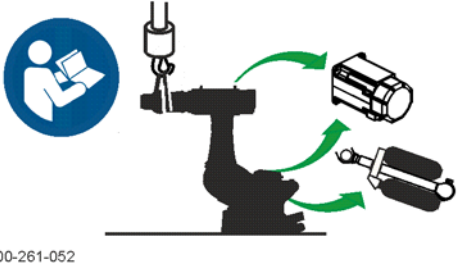

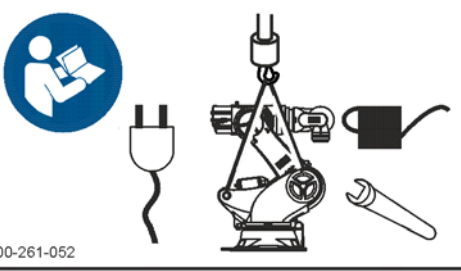

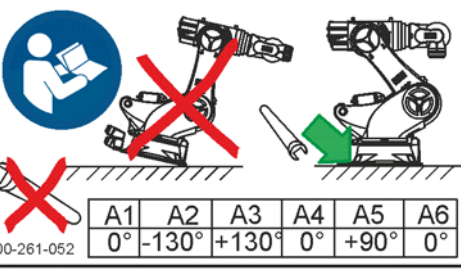
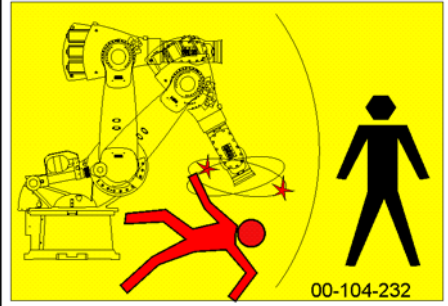
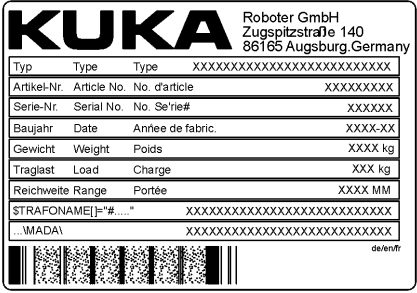



Fig. 4-11: Location of plates and labels

Item	Description
1	 <p>High voltage Any improper handling can lead to contact with current-carrying components. Electric shock hazard!</p>
2	 <p>Hot surface During operation of the robot, surface temperatures may be reached that could result in burn injuries. Protective gloves must be worn!</p>

Item	Description																		
3	<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  <p style="font-size: small;">00-261-052</p> </div> </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: yellow; text-align: center; width: 20%;">⚠ CAUTION</td> <td>Before removing the motor or counterbalancing system, secure robot axis to prevent it from moving!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ ATTENTION</td> <td>Avant de retirer le moteur ou le système d'équilibrage, protéger l'axe du robot pour éviter tout mouvement!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ VORSICHT</td> <td>Vor Entfernen des Motors oder des Gewichtsausgleichs, Roboterachse gegen Bewegungen sichern!</td> </tr> </table> <p>Secure the axes Before exchanging any motor or counterbalancing system, secure the corresponding axis through safeguarding by suitable means/devices to protect against possible movement. The axis can move. Risk of crushing!</p>	⚠ CAUTION	Before removing the motor or counterbalancing system, secure robot axis to prevent it from moving!	⚠ ATTENTION	Avant de retirer le moteur ou le système d'équilibrage, protéger l'axe du robot pour éviter tout mouvement!	⚠ VORSICHT	Vor Entfernen des Motors oder des Gewichtsausgleichs, Roboterachse gegen Bewegungen sichern!												
⚠ CAUTION	Before removing the motor or counterbalancing system, secure robot axis to prevent it from moving!																		
⚠ ATTENTION	Avant de retirer le moteur ou le système d'équilibrage, protéger l'axe du robot pour éviter tout mouvement!																		
⚠ VORSICHT	Vor Entfernen des Motors oder des Gewichtsausgleichs, Roboterachse gegen Bewegungen sichern!																		
4	<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  <p style="font-size: small;">00-261-052</p> </div> </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: yellow; text-align: center; width: 20%;">⚠ CAUTION</td> <td>Secure the system before beginning work on the robot. Read and observe the safety instructions!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ ATTENTION</td> <td>Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ VORSICHT</td> <td>Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!</td> </tr> </table> <p>Work on the robot Before start-up, transportation or maintenance, read and follow the assembly and operating instructions.</p>	⚠ CAUTION	Secure the system before beginning work on the robot. Read and observe the safety instructions!	⚠ ATTENTION	Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!	⚠ VORSICHT	Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!												
⚠ CAUTION	Secure the system before beginning work on the robot. Read and observe the safety instructions!																		
⚠ ATTENTION	Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!																		
⚠ VORSICHT	Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!																		
5	<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  <p style="font-size: small;">00-261-052</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>A1</td> <td>A2</td> <td>A3</td> <td>A4</td> <td>A5</td> <td>A6</td> </tr> <tr> <td>0°</td> <td>-130°</td> <td>+130°</td> <td>0°</td> <td>+90°</td> <td>0°</td> </tr> </table> </div> </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: yellow; text-align: center; width: 20%;">⚠ CAUTION</td> <td>Move the robot into its transport position before removing the mounting base!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ ATTENTION</td> <td>Amener le robot en position de transport avant de défaire la fixation aux fondations!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ VORSICHT</td> <td>Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!</td> </tr> </table> <p>Transport position Before loosening the bolts of the mounting base, the robot must be in the transport position as indicated in the table. Risk of toppling!</p>	A1	A2	A3	A4	A5	A6	0°	-130°	+130°	0°	+90°	0°	⚠ CAUTION	Move the robot into its transport position before removing the mounting base!	⚠ ATTENTION	Amener le robot en position de transport avant de défaire la fixation aux fondations!	⚠ VORSICHT	Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!
A1	A2	A3	A4	A5	A6														
0°	-130°	+130°	0°	+90°	0°														
⚠ CAUTION	Move the robot into its transport position before removing the mounting base!																		
⚠ ATTENTION	Amener le robot en position de transport avant de défaire la fixation aux fondations!																		
⚠ VORSICHT	Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!																		

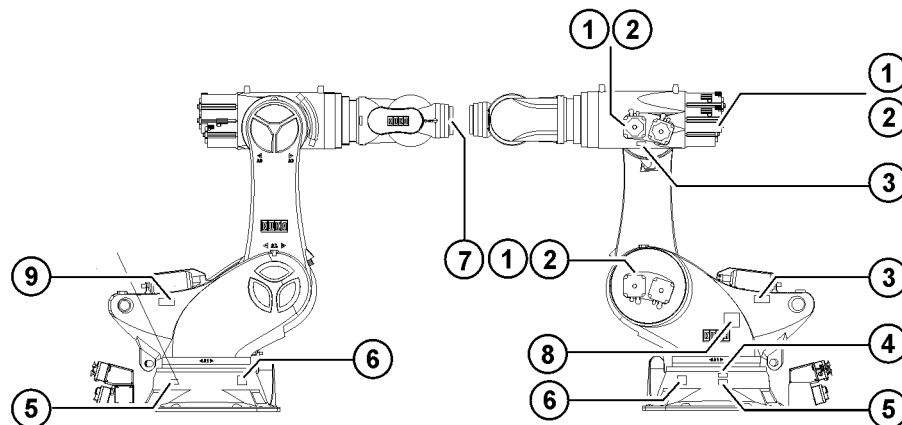Item	Description																				
6	 <p data-bbox="536 539 695 566">Danger zone</p> <p data-bbox="536 571 1315 636">Entering the danger zone of the robot is prohibited if the robot is in operation or ready for operation. Risk of injury!</p>																				
7	<table border="1" data-bbox="536 654 986 958"> <tbody> <tr> <td>Schrauben</td> <td>M10 Qualitat 10.9</td> </tr> <tr> <td>Einschraubtiefe</td> <td>min. 12 max. 16mm</td> </tr> <tr> <td>Klemmlänge</td> <td>min. 12mm</td> </tr> <tr> <td>Fastening screws</td> <td>M10 quality 10.9</td> </tr> <tr> <td>Engagement length</td> <td>min. 12 max. 16mm</td> </tr> <tr> <td>Screw grip</td> <td>min. 12mm</td> </tr> <tr> <td>Vis</td> <td>M10 qualite 10.9</td> </tr> <tr> <td>Longueur vissée</td> <td>min. 12 max. 16mm</td> </tr> <tr> <td>Longueur de serrage</td> <td>min. 12mm</td> </tr> <tr> <td colspan="2" style="text-align: right;">Art.Nr. 00-139-033</td> </tr> </tbody> </table> <p data-bbox="536 981 938 1008">Mounting flange on in-line wrist</p> <p data-bbox="536 1012 1315 1072">The values specified on this plate apply for the installation of tools on the mounting flange of the wrist and must be observed.</p>	Schrauben	M10 Qualitat 10.9	Einschraubtiefe	min. 12 max. 16mm	Klemmlänge	min. 12mm	Fastening screws	M10 quality 10.9	Engagement length	min. 12 max. 16mm	Screw grip	min. 12mm	Vis	M10 qualite 10.9	Longueur vissée	min. 12 max. 16mm	Longueur de serrage	min. 12mm	Art.Nr. 00-139-033	
Schrauben	M10 Qualitat 10.9																				
Einschraubtiefe	min. 12 max. 16mm																				
Klemmlänge	min. 12mm																				
Fastening screws	M10 quality 10.9																				
Engagement length	min. 12 max. 16mm																				
Screw grip	min. 12mm																				
Vis	M10 qualite 10.9																				
Longueur vissée	min. 12 max. 16mm																				
Longueur de serrage	min. 12mm																				
Art.Nr. 00-139-033																					

Item	Description																																				
8	<div data-bbox="651 203 1102 528" style="border: 1px solid black; padding: 5px;">  <p>KUKA Roboter GmbH Zugspitzstraße 140 86165 Augsburg, Germany</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Typ</td> <td>Type</td> <td>Type</td> <td>XXXXXXXXXXXXXXXXXXXXXXXXXX</td> </tr> <tr> <td>Artikel-Nr.</td> <td>Article No.</td> <td>No. d'article</td> <td>XXXXXXXXXX</td> </tr> <tr> <td>Serie-Nr.</td> <td>Serial No.</td> <td>No. Série#</td> <td>XXXXXX</td> </tr> <tr> <td>Baujahr</td> <td>Date</td> <td>Année de fabric.</td> <td>XXXX-XX</td> </tr> <tr> <td>Gewicht</td> <td>Weight</td> <td>Poids</td> <td>XXXX kg</td> </tr> <tr> <td>Traglast</td> <td>Load</td> <td>Charge</td> <td>XXX kg</td> </tr> <tr> <td>Reichweite</td> <td>Range</td> <td>Portée</td> <td>XXXX MM</td> </tr> <tr> <td colspan="2">STRAFONAME]="#....."</td> <td></td> <td>XXXXXXXXXXXXXXXXXXXXXXXXXX</td> </tr> <tr> <td colspan="2">...MADA]</td> <td></td> <td>XXXXXXXXXXXXXXXXXXXXXXXXXX</td> </tr> </table> </div> <p>Identification plate Content according to Machinery Directive.</p>	Typ	Type	Type	XXXXXXXXXXXXXXXXXXXXXXXXXX	Artikel-Nr.	Article No.	No. d'article	XXXXXXXXXX	Serie-Nr.	Serial No.	No. Série#	XXXXXX	Baujahr	Date	Année de fabric.	XXXX-XX	Gewicht	Weight	Poids	XXXX kg	Traglast	Load	Charge	XXX kg	Reichweite	Range	Portée	XXXX MM	STRAFONAME]="#....."			XXXXXXXXXXXXXXXXXXXXXXXXXX	...MADA]			XXXXXXXXXXXXXXXXXXXXXXXXXX
Typ	Type	Type	XXXXXXXXXXXXXXXXXXXXXXXXXX																																		
Artikel-Nr.	Article No.	No. d'article	XXXXXXXXXX																																		
Serie-Nr.	Serial No.	No. Série#	XXXXXX																																		
Baujahr	Date	Année de fabric.	XXXX-XX																																		
Gewicht	Weight	Poids	XXXX kg																																		
Traglast	Load	Charge	XXX kg																																		
Reichweite	Range	Portée	XXXX MM																																		
STRAFONAME]="#....."			XXXXXXXXXXXXXXXXXXXXXXXXXX																																		
...MADA]			XXXXXXXXXXXXXXXXXXXXXXXXXX																																		
9	<div data-bbox="651 640 1433 1128" style="border: 1px solid black; padding: 5px;">  <p style="text-align: center;">p > 12 MPa (120 bar) 00-261-052</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: yellow; text-align: center;">⚠ CAUTION</td> <td>Counterbalancing system pressurized – read and observe safety instructions before beginning work!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ ATTENTION</td> <td>Le système d'équilibrage est sous pression, lire et respecter les remarques relatives à la sécurité avant d'effectuer des travaux!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ VORSICHT</td> <td>Gewichtsausgleich unter Druck, vor Arbeiten Sicherheitshinweise lesen und beachten!</td> </tr> </table> <p>Counterbalancing system The system is pressurized with oil and nitrogen. Read and follow the assembly and operating instructions before commencing work on the counterbalancing system. Risk of injury!</p> </div>	⚠ CAUTION	Counterbalancing system pressurized – read and observe safety instructions before beginning work!	⚠ ATTENTION	Le système d'équilibrage est sous pression, lire et respecter les remarques relatives à la sécurité avant d'effectuer des travaux!	⚠ VORSICHT	Gewichtsausgleich unter Druck, vor Arbeiten Sicherheitshinweise lesen und beachten!																														
⚠ CAUTION	Counterbalancing system pressurized – read and observe safety instructions before beginning work!																																				
⚠ ATTENTION	Le système d'équilibrage est sous pression, lire et respecter les remarques relatives à la sécurité avant d'effectuer des travaux!																																				
⚠ VORSICHT	Gewichtsausgleich unter Druck, vor Arbeiten Sicherheitshinweise lesen und beachten!																																				

4.8 REACH duty to communicate information acc. to Art. 33 of Regulation (EC) 1907/2006

On the basis of the information provided by our suppliers, this product and its components contain no substances included on the Candidate List of Substances of Very High Concern (SVHCs) in a concentration exceeding 0.1 per cent by mass.

4.9 Stopping distances and times

4.9.1 General information

Information concerning the data:

- The stopping distance is the angle traveled by the robot from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The stopping time is the time that elapses from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The data are given for the main axes A1, A2 and A3. The main axes are the axes with the greatest deflection.
- Superposed axis motions can result in longer stopping distances.

- Stopping distances and stopping times in accordance with DIN EN ISO 10218-1, Annex B.
- Stop categories:
 - Stop category 0 » STOP 0
 - Stop category 1 » STOP 1 according to IEC 60204-1
- The values specified for Stop 0 are guide values determined by means of tests and simulation. They are average values which conform to the requirements of DIN EN ISO 10218-1. The actual stopping distances and stopping times may differ due to internal and external influences on the braking torque. It is therefore advisable to determine the exact stopping distances and stopping times where necessary under the real conditions of the actual robot application.
- Measuring technique
The stopping distances were measured using the robot-internal measuring technique.
- The wear on the brakes varies depending on the operating mode, robot application and the number of STOP 0 triggered. It is therefore advisable to check the stopping distance at least once a year.

4.9.2 Terms used

Term	Description
m	Mass of the rated load and the supplementary load on the arm.
Phi	Angle of rotation (°) about the corresponding axis. This value can be entered in the controller via the KCP/smartPAD and can be displayed on the KCP/smartPAD.
POV	Program override (%) = velocity of the robot motion. This value can be entered in the controller via the KCP/smartPAD and can be displayed on the KCP/smartPAD.
Extension	Distance (l in %) (>>> Fig. 4-12) between axis 1 and the intersection of axes 4 and 5. With parallelogram robots, the distance between axis 1 and the intersection of axis 6 and the mounting flange.
KCP	KUKA Control Panel Teach pendant for the KR C2/KR C2 edition2005 The KCP has all the operator control and display functions required for operating and programming the industrial robot.
smartPAD	Teach pendant for the KR C4 The smartPAD has all the operator control and display functions required for operating and programming the industrial robot.

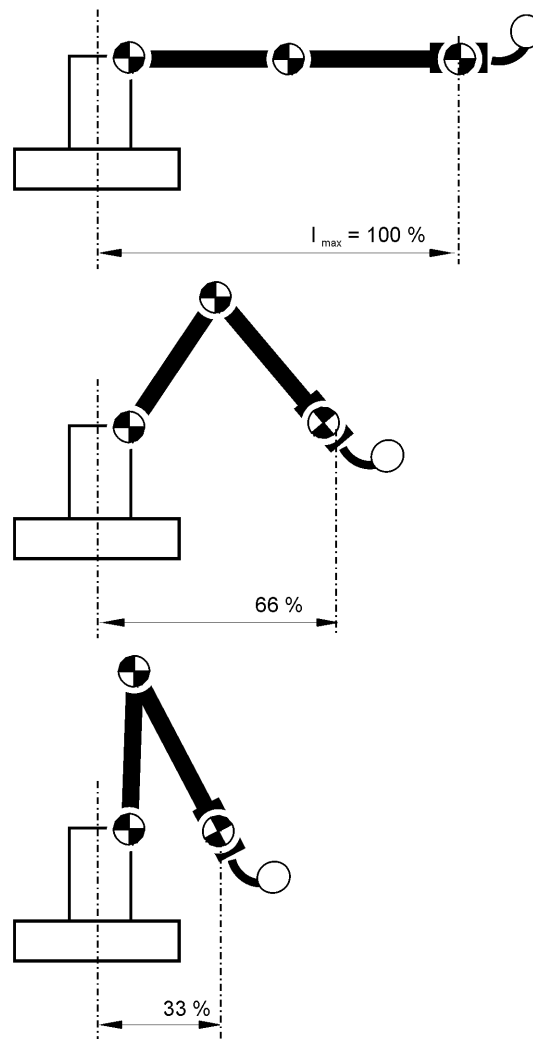


Fig. 4-12: Extension

4.9.3 Stopping distances and times, KR 1000 titan

4.9.3.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 3

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension $l = 100\%$
- Program override POV = 100%
- Mass $m =$ maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	34.94	0.914
Axis 2	35.00	1.000
Axis 3	25.00	0.700

4.9.3.2 Stopping distances and stopping times for STOP 1, axis 1

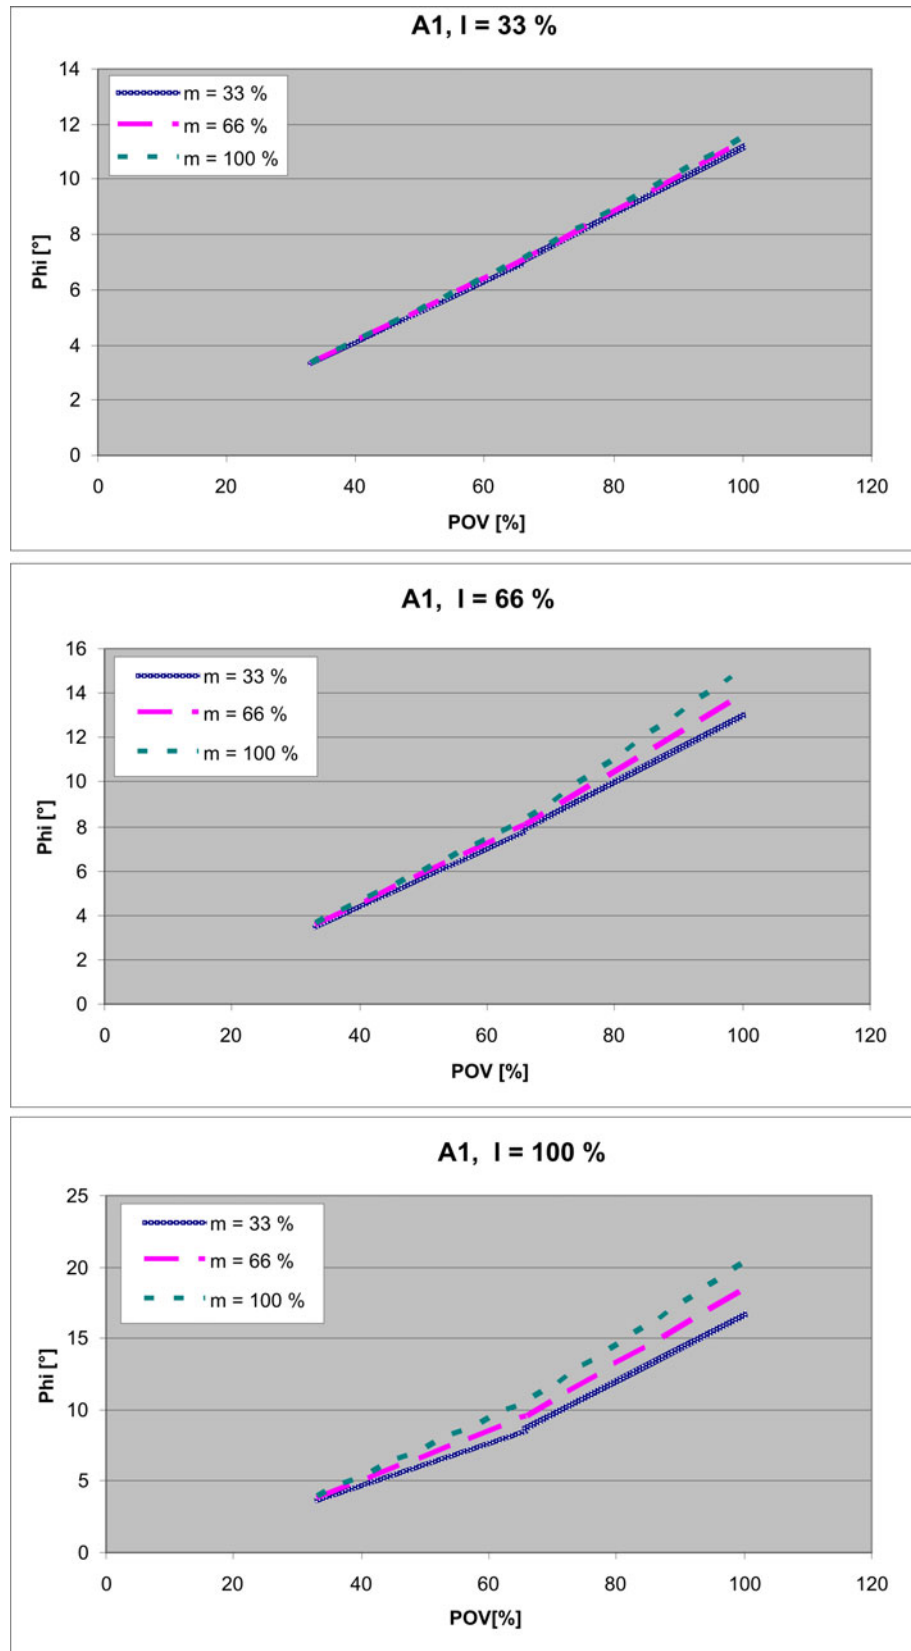


Fig. 4-13: Stopping distances for STOP 1, axis 1

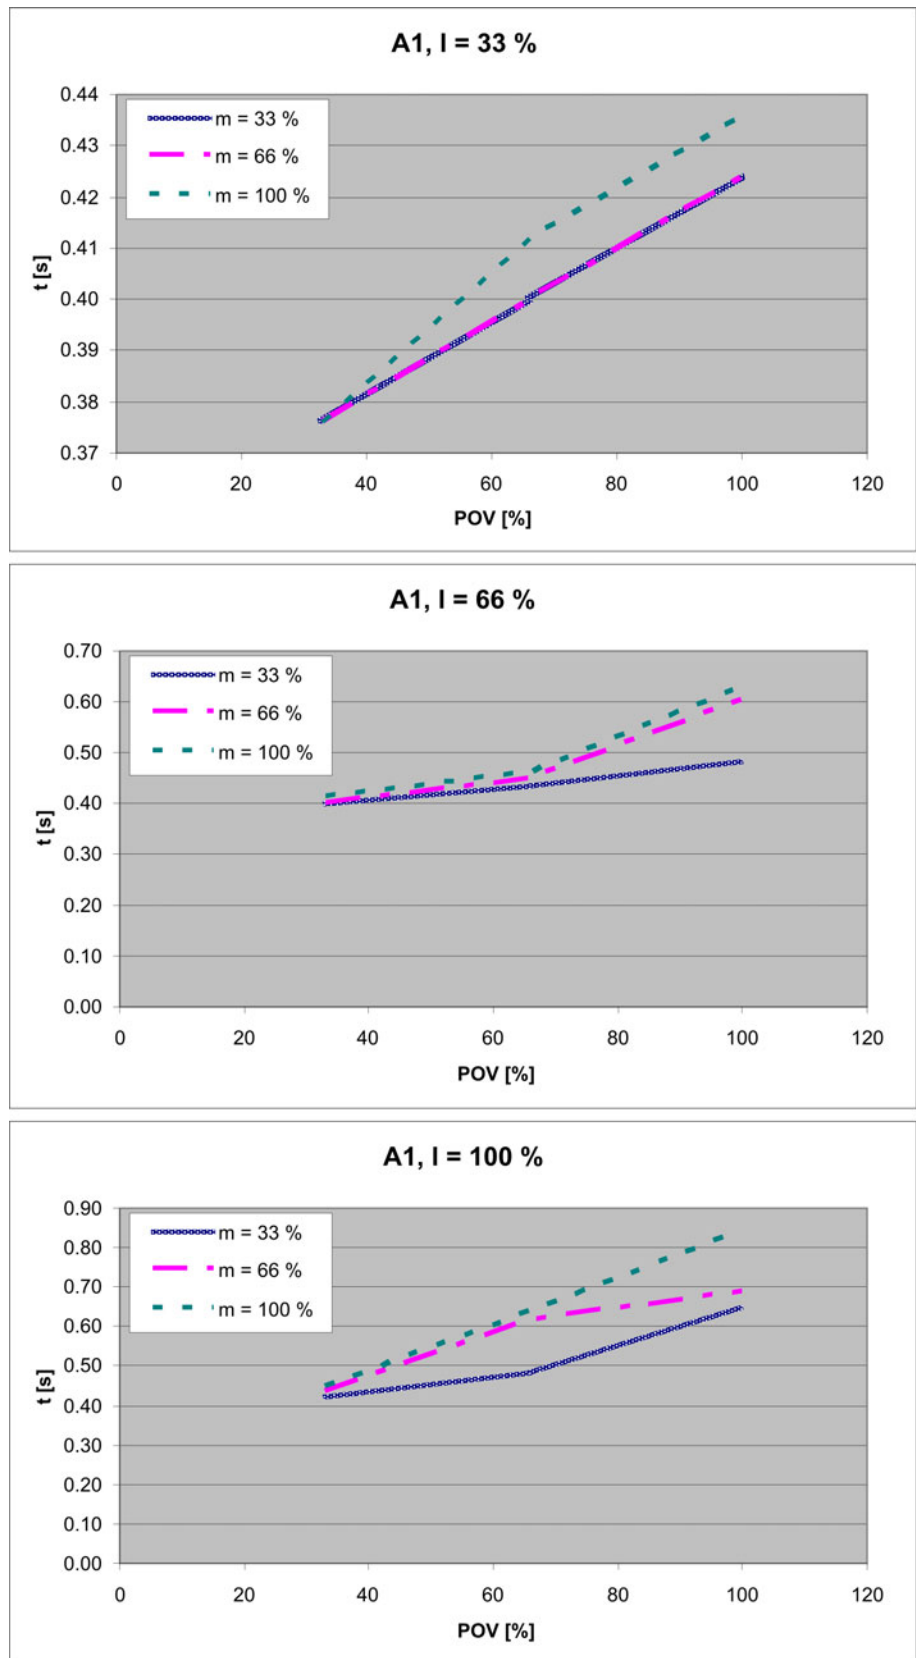


Fig. 4-14: Stopping times for STOP 1, axis 1

4.9.3.3 Stopping distances and stopping times for STOP 1, axis 2

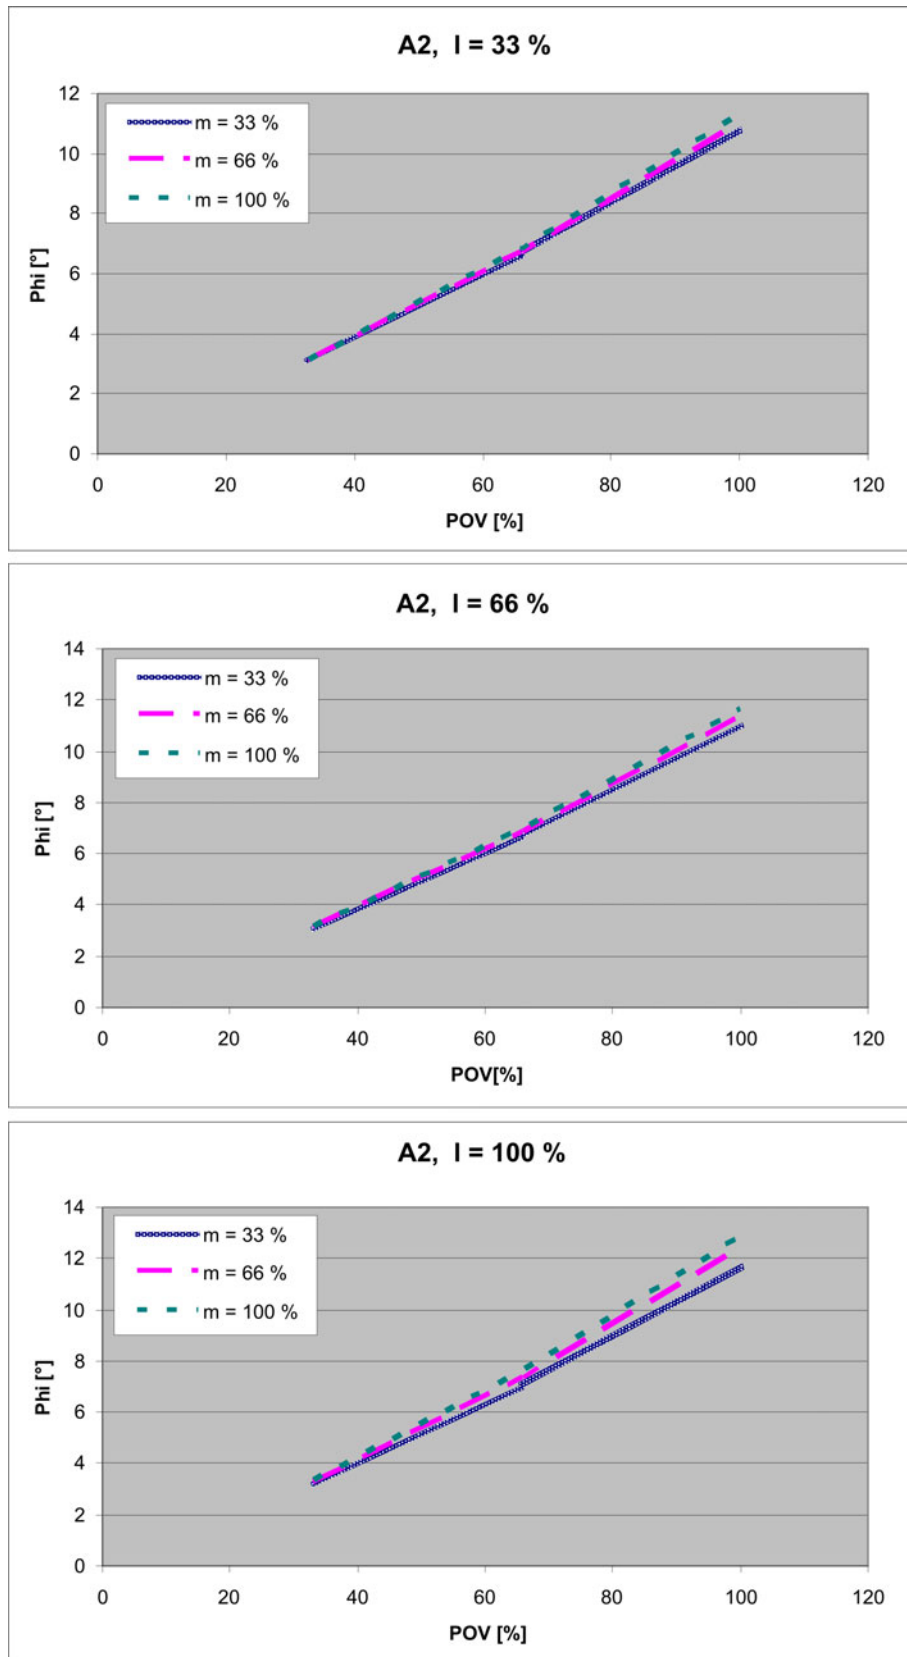


Fig. 4-15: Stopping distances for STOP 1, axis 2

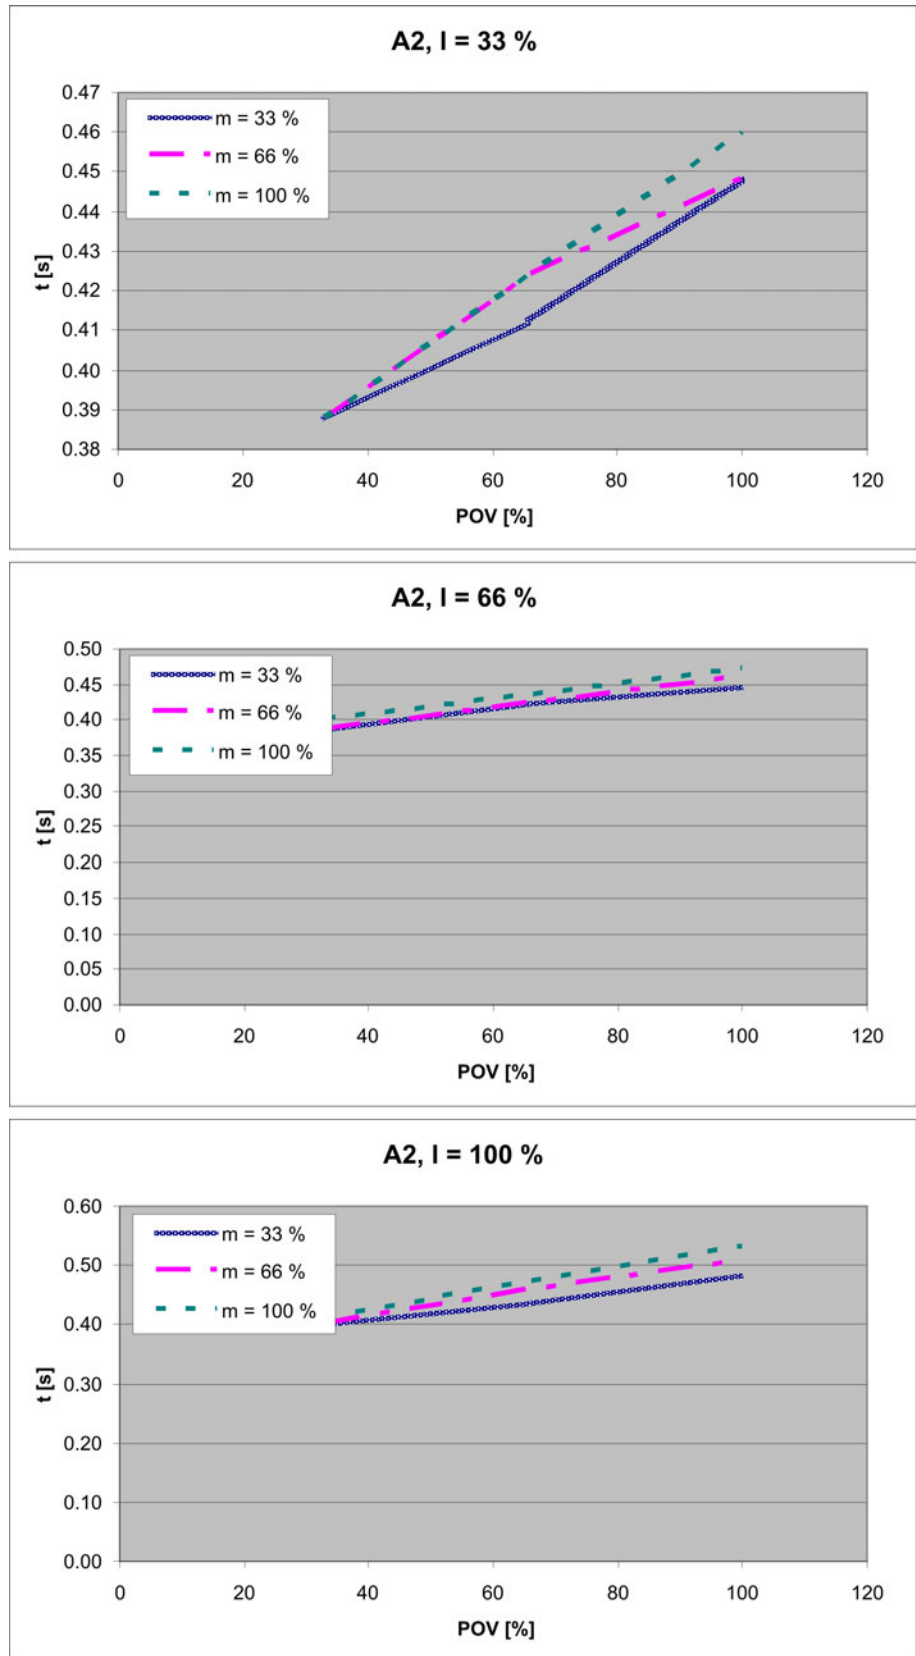


Fig. 4-16: Stopping times for STOP 1, axis 2

4.9.3.4 Stopping distances and stopping times for STOP 1, axis 3

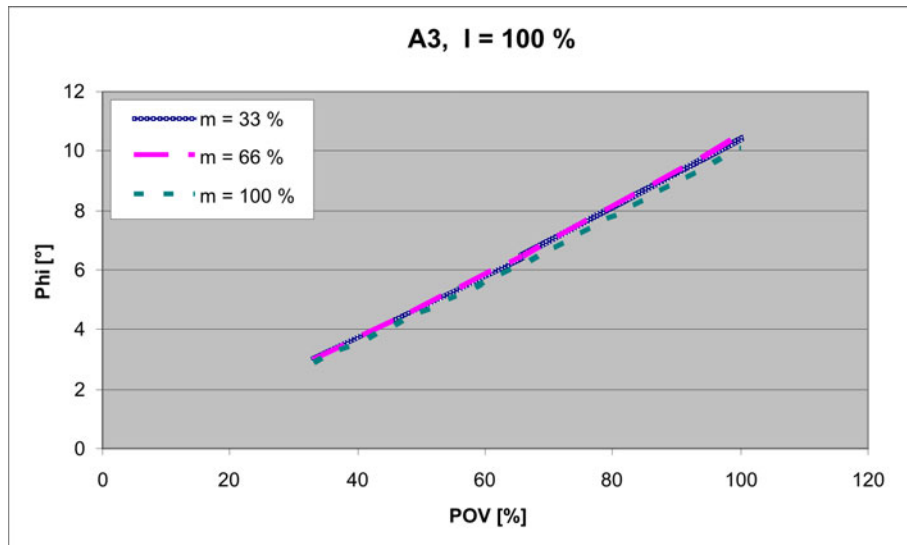


Fig. 4-17: Stopping distances for STOP 1, axis 3

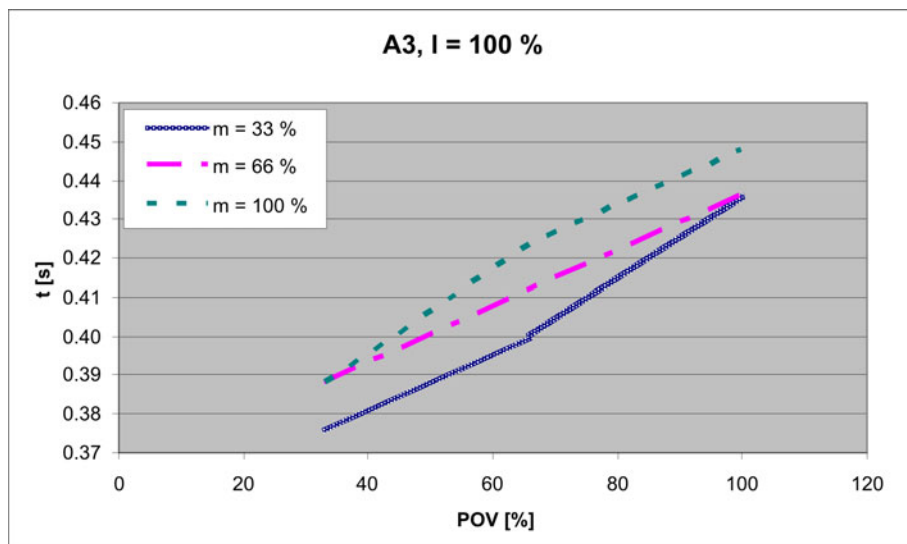


Fig. 4-18: Stopping times for STOP 1, axis 3

4.9.4 Stopping distances and times, KR 1000 L750 titan

4.9.4.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 3

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension $l = 100\%$
- Program override $POV = 100\%$
- Mass $m =$ maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	36.25	1.013
Axis 2	19.39	0.533
Axis 3	16.41	0.442

4.9.4.2 Stopping distances and stopping times for STOP 1, axis 1

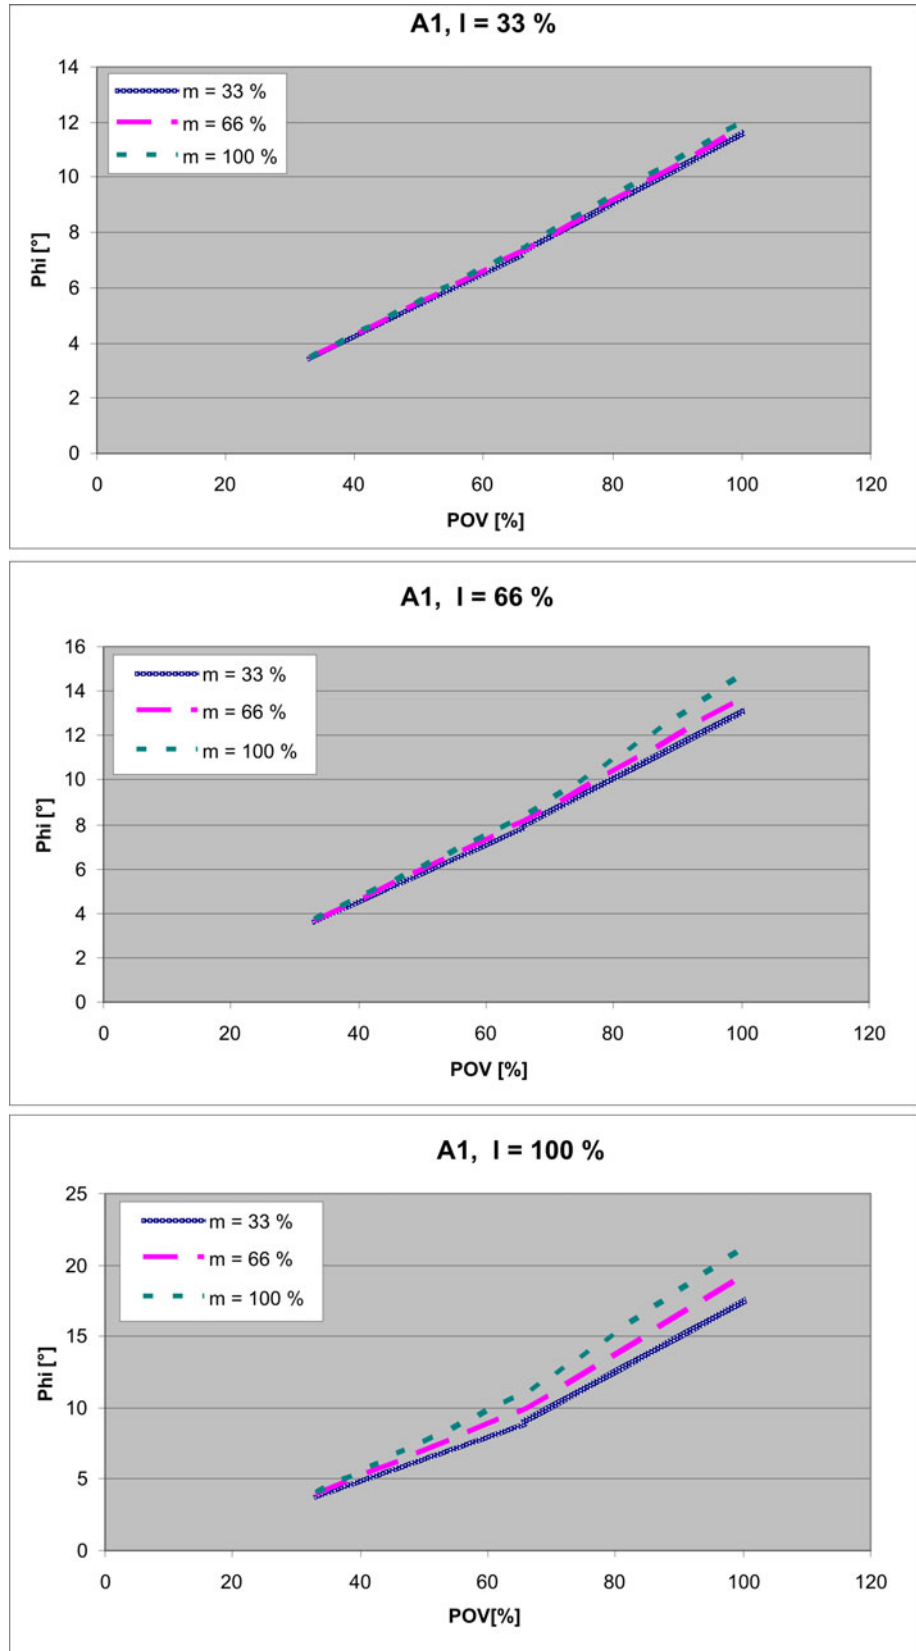


Fig. 4-19: Stopping distances for STOP 1, axis 1

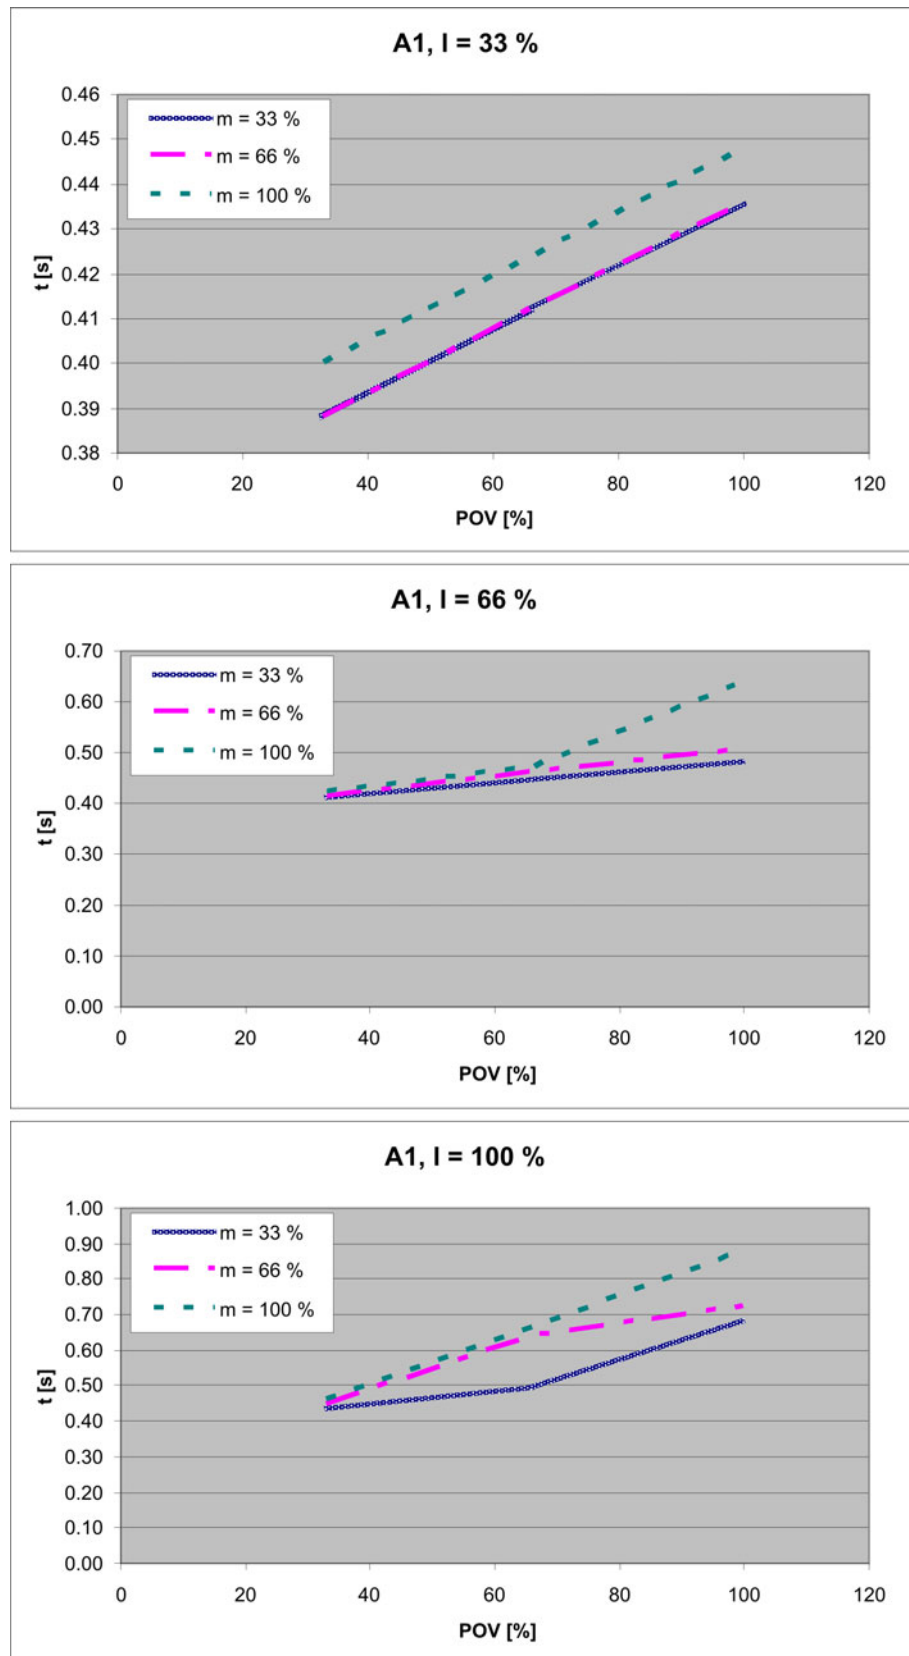


Fig. 4-20: Stopping times for STOP 1, axis 1

4.9.4.3 Stopping distances and stopping times for STOP 1, axis 2

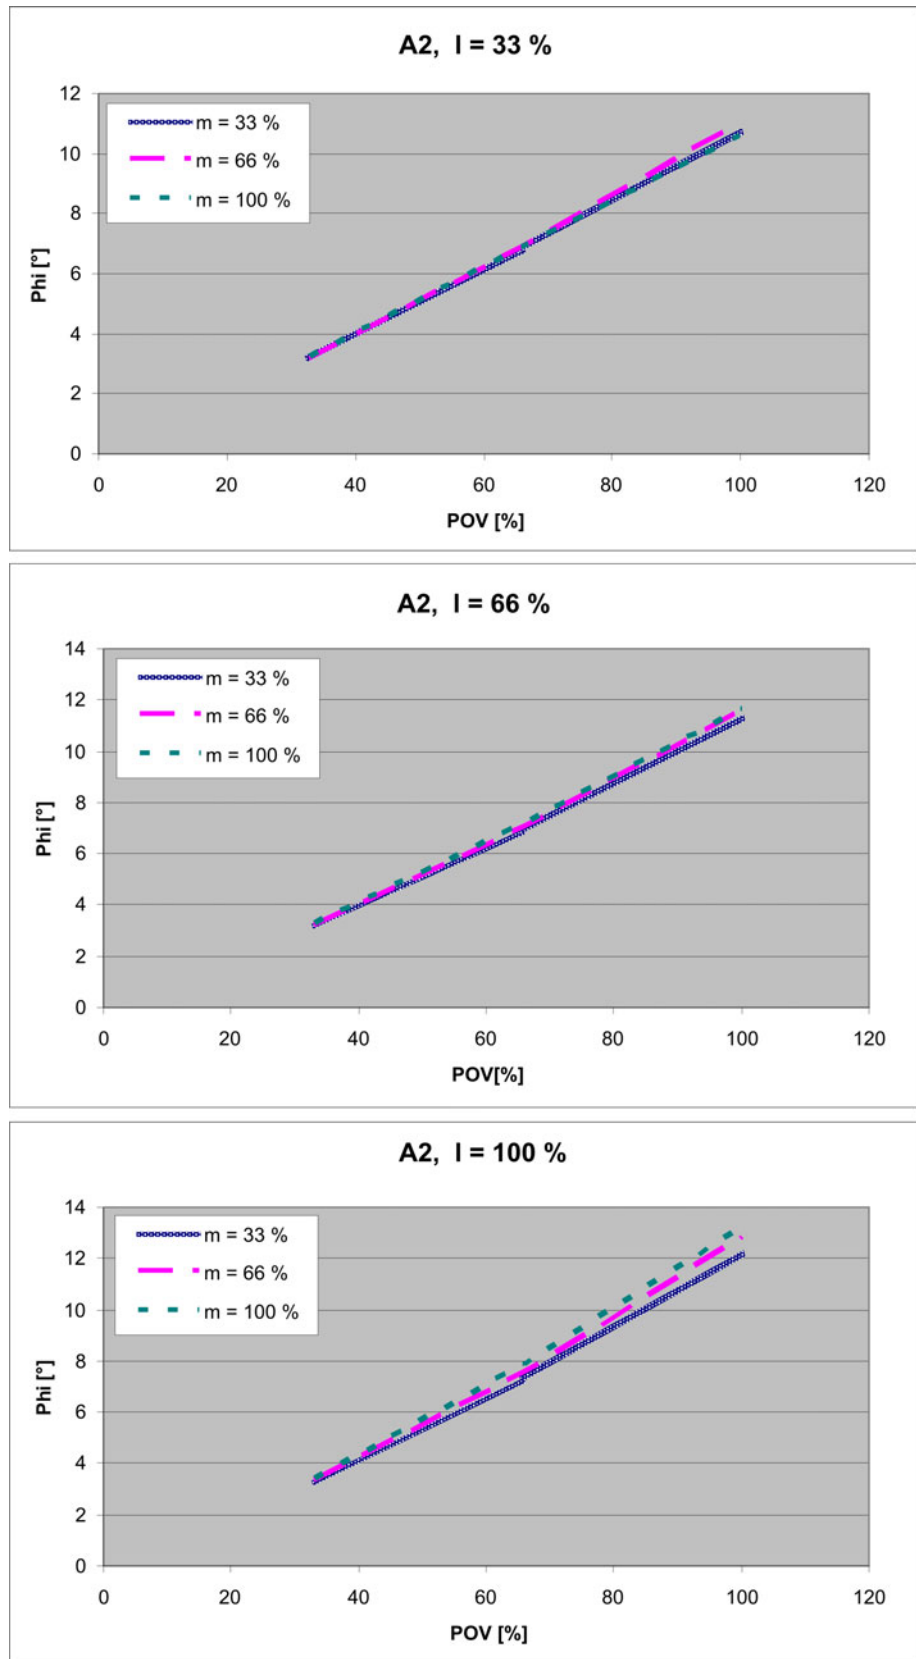


Fig. 4-21: Stopping distances for STOP 1, axis 2

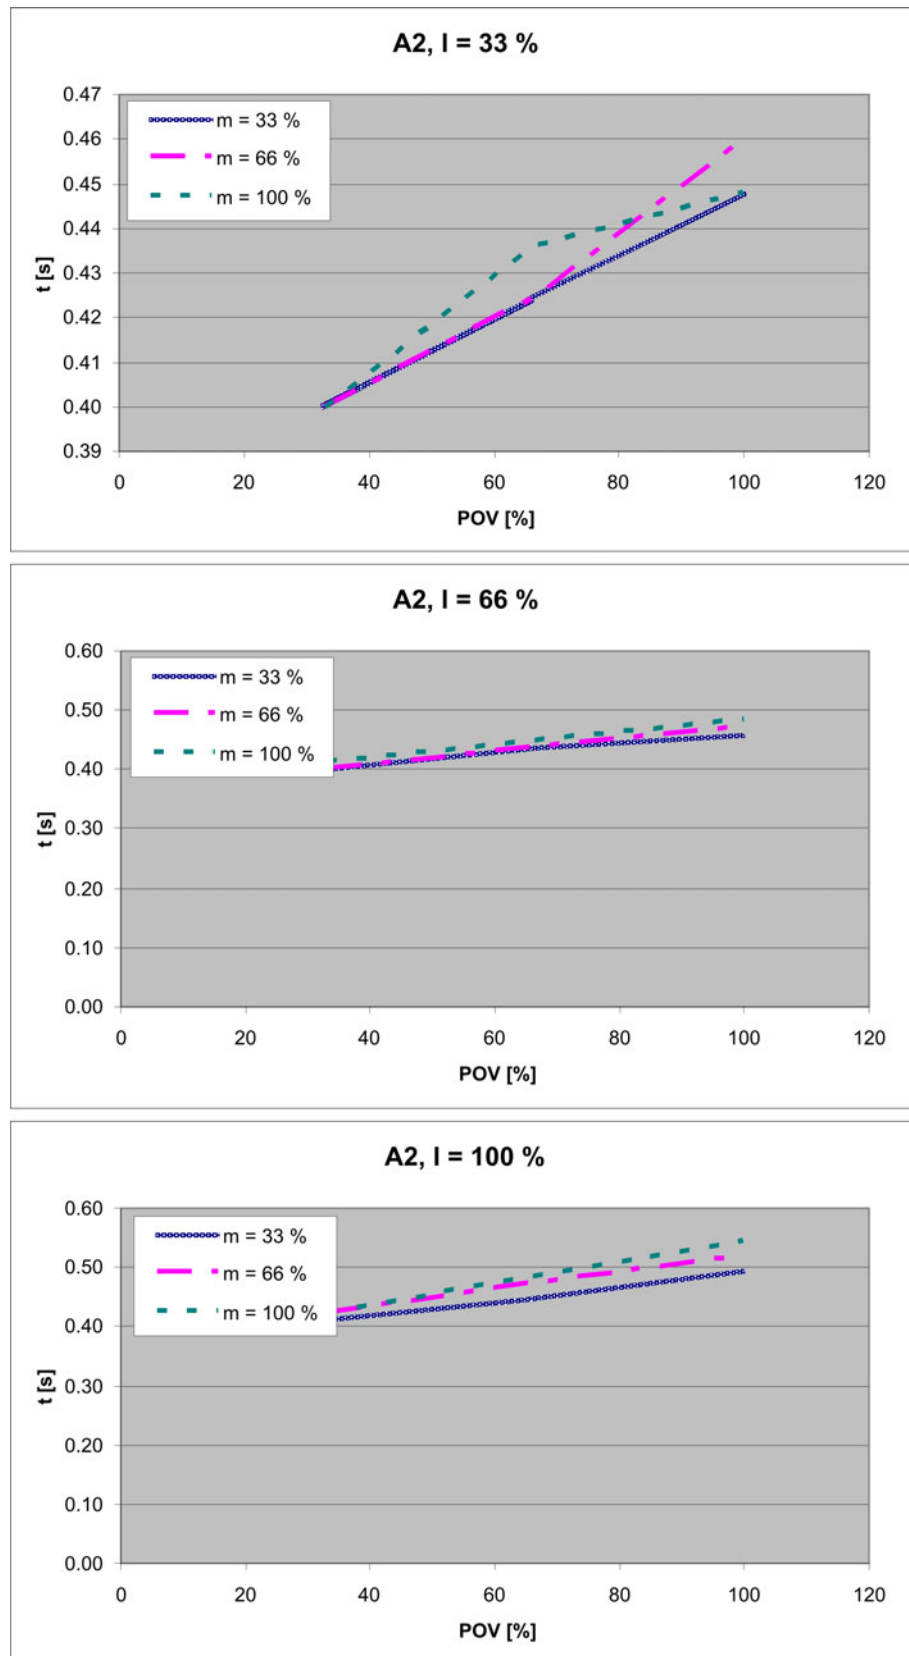


Fig. 4-22: Stopping times for STOP 1, axis 2

4.9.4.4 Stopping distances and stopping times for STOP 1, axis 3

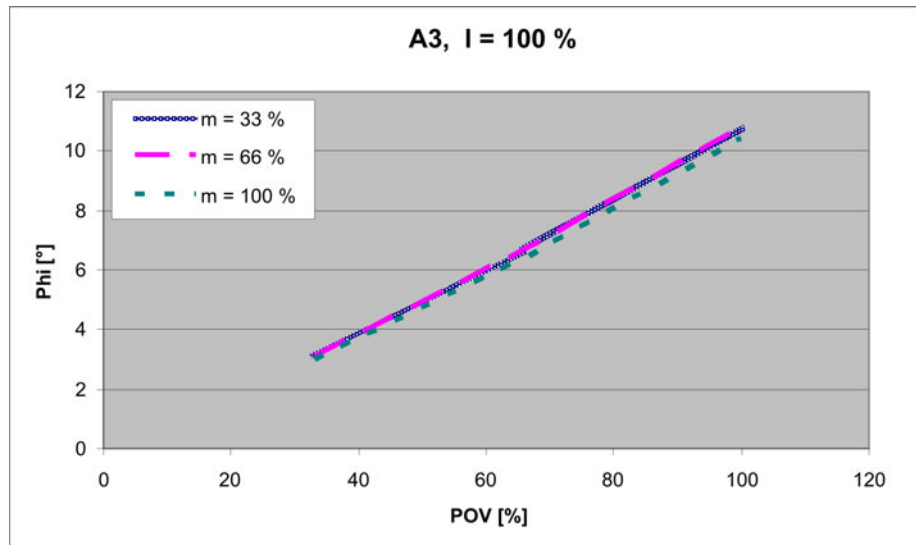


Fig. 4-23: Stopping distances for STOP 1, axis 3

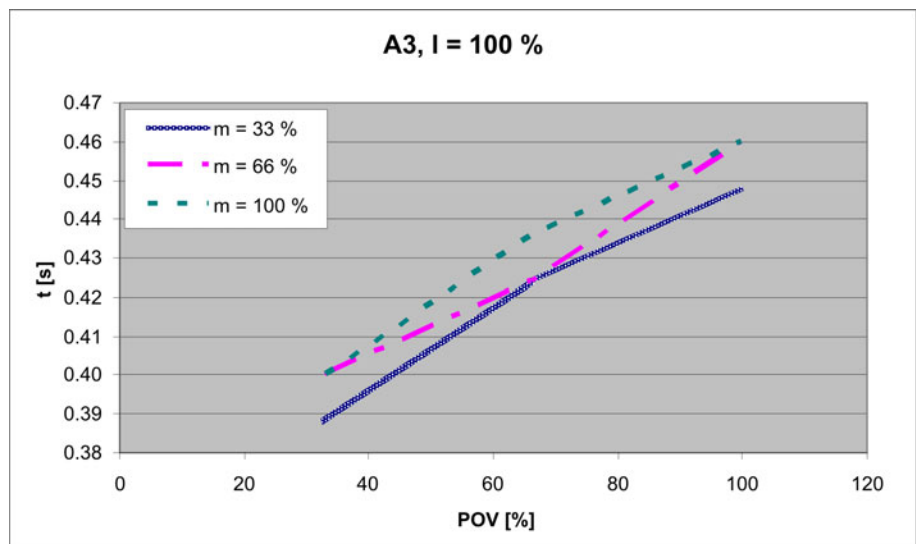


Fig. 4-24: Stopping times for STOP 1, axis 3

5 Safety

5.1 General



■ This “Safety” chapter refers to a mechanical component of an industrial robot.

■ If the mechanical component is used together with a KUKA robot controller, the “Safety” chapter of the operating instructions or assembly instructions of the robot controller must be used!

This contains all the information provided in this “Safety” chapter. It also contains additional safety information relating to the robot controller which must be observed.

■ Where this “Safety” chapter uses the term “industrial robot”, this also refers to the individual mechanical component if applicable.

5.1.1 Liability

The device described in this document is either an industrial robot or a component thereof.

Components of the industrial robot:

- Manipulator
- Robot controller
- Teach pendant
- Connecting cables
- External axes (optional)
e.g. linear unit, turn-tilt table, positioner
- Software
- Options, accessories

The industrial robot is built using state-of-the-art technology and in accordance with the recognized safety rules. Nevertheless, misuse of the industrial robot may constitute a risk to life and limb or cause damage to the industrial robot and to other material property.

The industrial robot may only be used in perfect technical condition in accordance with its designated use and only by safety-conscious persons who are fully aware of the risks involved in its operation. Use of the industrial robot is subject to compliance with this document and with the declaration of incorporation supplied together with the industrial robot. Any functional disorders affecting safety must be rectified immediately.

Safety information

Safety information cannot be held against KUKA Roboter GmbH. Even if all safety instructions are followed, this is not a guarantee that the industrial robot will not cause personal injuries or material damage.

No modifications may be carried out to the industrial robot without the authorization of KUKA Roboter GmbH. Additional components (tools, software, etc.), not supplied by KUKA Roboter GmbH, may be integrated into the industrial robot. The user is liable for any damage these components may cause to the industrial robot or to other material property.

In addition to the Safety chapter, this document contains further safety instructions. These must also be observed.

5.1.2 Intended use of the industrial robot

The industrial robot is intended exclusively for the use designated in the “Purpose” chapter of the operating instructions or assembly instructions.

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. The manufacturer is not liable for any damage resulting from such misuse. The risk lies entirely with the user.

Operation of the industrial robot in accordance with its intended use also requires compliance with the operating and assembly instructions for the individual components, with particular reference to the maintenance specifications.

Misuse

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Transportation of persons and animals
- Use as a climbing aid
- Operation outside the specified operating parameters
- Use in potentially explosive environments
- Operation without additional safeguards
- Outdoor operation
- Underground operation

5.1.3 EC declaration of conformity and declaration of incorporation

The industrial robot constitutes partly completed machinery as defined by the EC Machinery Directive. The industrial robot may only be put into operation if the following preconditions are met:

- The industrial robot is integrated into a complete system.
 - or: The industrial robot, together with other machinery, constitutes a complete system.
 - or: All safety functions and safeguards required for operation in the complete machine as defined by the EC Machinery Directive have been added to the industrial robot.
- The complete system complies with the EC Machinery Directive. This has been confirmed by means of an assessment of conformity.

Declaration of conformity

The system integrator must issue a declaration of conformity for the complete system in accordance with the Machinery Directive. The declaration of conformity forms the basis for the CE mark for the system. The industrial robot must always be operated in accordance with the applicable national laws, regulations and standards.

The robot controller is CE certified under the EMC Directive and the Low Voltage Directive.

Declaration of incorporation

The partly completed machinery is supplied with a declaration of incorporation in accordance with Annex II B of the EC Machinery Directive 2006/42/EC. The assembly instructions and a list of essential requirements complied with in accordance with Annex I are integral parts of this declaration of incorporation.

The declaration of incorporation declares that the start-up of the partly completed machinery is not allowed until the partly completed machinery has been incorporated into machinery, or has been assembled with other parts to form machinery, and this machinery complies with the terms of the EC Machinery Directive, and the EC declaration of conformity is present in accordance with Annex II A.

5.1.4 Terms used

Term	Description
Axis range	Range of each axis, in degrees or millimeters, within which it may move. The axis range must be defined for each axis.
Stopping distance	Stopping distance = reaction distance + braking distance The stopping distance is part of the danger zone.
Workspace	The manipulator is allowed to move within its workspace. The workspace is derived from the individual axis ranges.
Operator (User)	The user of the industrial robot can be the management, employer or delegated person responsible for use of the industrial robot.
Danger zone	The danger zone consists of the workspace and the stopping distances.
Service life	The service life of a safety-relevant component begins at the time of delivery of the component to the customer. The service life is not affected by whether the component is used in a robot controller or elsewhere or not, as safety-relevant components are also subject to ageing during storage.
KCP	The KCP (KUKA Control Panel) teach pendant has all the operator control and display functions required for operating and programming the industrial robot.
Manipulator	The robot arm and the associated electrical installations
Safety zone	The safety zone is situated outside the danger zone.
Stop category 0	The drives are deactivated immediately and the brakes are applied. The manipulator and any external axes (optional) perform path-oriented braking. Note: This stop category is called STOP 0 in this document.
Stop category 1	The manipulator and any external axes (optional) perform path-maintaining braking. The drives are deactivated after 1 s and the brakes are applied. Note: This stop category is called STOP 1 in this document.
Stop category 2	The drives are not deactivated and the brakes are not applied. The manipulator and any external axes (optional) are braked with a normal braking ramp. Note: This stop category is called STOP 2 in this document.
System integrator (plant integrator)	System integrators are people who safely integrate the industrial robot into a complete system and commission it.
T1	Test mode, Manual Reduced Velocity (≤ 250 mm/s)
T2	Test mode, Manual High Velocity (> 250 mm/s permissible)
External axis	Motion axis which is not part of the manipulator but which is controlled using the robot controller, e.g. KUKA linear unit, turn-tilt table, Posiflex.


5.2 Personnel

The following persons or groups of persons are defined for the industrial robot:

- User
- Personnel



All persons working with the industrial robot must have read and understood the industrial robot documentation, including the safety chapter.

User	<p>The user must observe the labor laws and regulations. This includes e.g.:</p> <ul style="list-style-type: none"> ■ The user must comply with his monitoring obligations. ■ The user must carry out briefing at defined intervals.
Personnel	<p>Personnel must be instructed, before any work is commenced, in the type of work involved and what exactly it entails as well as any hazards which may exist. Instruction must be carried out regularly. Instruction is also required after particular incidents or technical modifications.</p> <p>Personnel includes:</p> <ul style="list-style-type: none"> ■ System integrator ■ Operators, subdivided into: <ul style="list-style-type: none"> ■ Start-up, maintenance and service personnel ■ Operating personnel ■ Cleaning personnel <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <p>Installation, exchange, adjustment, operation, maintenance and repair must be performed only as specified in the operating or assembly instructions for the relevant component of the industrial robot and only by personnel specially trained for this purpose.</p> </div>

System integrator The industrial robot is safely integrated into a complete system by the system integrator.

The system integrator is responsible for the following tasks:

- Installing the industrial robot
- Connecting the industrial robot
- Performing risk assessment
- Implementing the required safety functions and safeguards
- Issuing the declaration of conformity
- Attaching the CE mark
- Creating the operating instructions for the complete system

Operator

The operator must meet the following preconditions:

- The operator must be trained for the work to be carried out.
- Work on the industrial robot must only be carried out by qualified personnel. These are people who, due to their specialist training, knowledge and experience, and their familiarization with the relevant standards, are able to assess the work to be carried out and detect any potential hazards.



Work on the electrical and mechanical equipment of the industrial robot may only be carried out by specially trained personnel.

5.3 Workspace, safety zone and danger zone

Workspaces are to be restricted to the necessary minimum size. A workspace must be safeguarded using appropriate safeguards.

The safeguards (e.g. safety gate) must be situated inside the safety zone. In the case of a stop, the manipulator and external axes (optional) are braked and come to a stop within the danger zone.

The danger zone consists of the workspace and the stopping distances of the manipulator and external axes (optional). It must be safeguarded by means of physical safeguards to prevent danger to persons or the risk of material damage.

5.4 Overview of protective equipment

The protective equipment of the mechanical component may include:


- Mechanical end stops
- Mechanical axis range limitation (optional)
- Axis range monitoring (optional)
- Release device
- Labeling of danger areas

Not all equipment is relevant for every mechanical component.

5.4.1 Mechanical end stops

Depending on the robot variant, the axis ranges of the main and wrist axes of the manipulator are partially limited by mechanical end stops.

Additional mechanical end stops can be installed on the external axes.


 **WARNING** If the manipulator or an external axis hits an obstruction or a mechanical end stop or axis range limitation, the manipulator can no longer be operated safely. The manipulator must be taken out of operation and KUKA Roboter GmbH must be consulted before it is put back into operation .

5.4.2 Mechanical axis range limitation (optional)

Some manipulators can be fitted with mechanical axis range limitation in axes A1 to A3. The adjustable axis range limitation systems restrict the working range to the required minimum. This increases personal safety and protection of the system.


In the case of manipulators that are not designed to be fitted with mechanical axis range limitation, the workspace must be laid out in such a way that there is no danger to persons or material property, even in the absence of mechanical axis range limitation.

If this is not possible, the workspace must be limited by means of photoelectric barriers, photoelectric curtains or obstacles on the system side. There must be no shearing or crushing hazards at the loading and transfer areas.

 This option is not available for all robot models. Information on specific robot models can be obtained from KUKA Roboter GmbH.

5.4.3 Axis range monitoring (optional)

Some manipulators can be fitted with dual-channel axis range monitoring systems in main axes A1 to A3. The positioner axes may be fitted with additional axis range monitoring systems. The safety zone for an axis can be adjusted and monitored using an axis range monitoring system. This increases personal safety and protection of the system.

 This option is not available for all robot models. Information on specific robot models can be obtained from KUKA Roboter GmbH.

5.4.4 Moving the manipulator without drive energy

The release device can be used to move the manipulator manually after an accident or malfunction. The release device can be used for the drive motors of A1 and A2. It is only for use in exceptional circumstances and emergencies (e.g. for freeing people).

5.4.4.1 Moving A1 with the release device

Required parts Required parts of the release device:

- Reversible ratchet
- 12 mm hexagon insert
- 12 mm hexagonal socket

Procedure

SAFETY INSTRUCTIONS

The following procedure must be followed exactly!

1. Switch off the robot controller and secure it (e.g. with a padlock) to prevent unauthorized persons from switching it on again.

CAUTION

The motors reach temperatures during operation which can cause burns to the skin. Contact must be avoided. Appropriate safety precautions must be taken, e.g. protective gloves must be worn.

2. Unplug the motor connectors from the left-hand motor of A1.
3. Unscrew the four M12 Allen screws from the left-hand motor.
4. Lift out the left-hand motor (weight: approx. 32 kg) and set it down.
5. Unscrew the motor shaft cover of the right-hand motor.
6. Fit the ratchet with the 12 mm hexagonal socket onto the motor shaft.
7. Turn A1 using the ratchet. The axis turns in the same direction as the ratchet is turned.

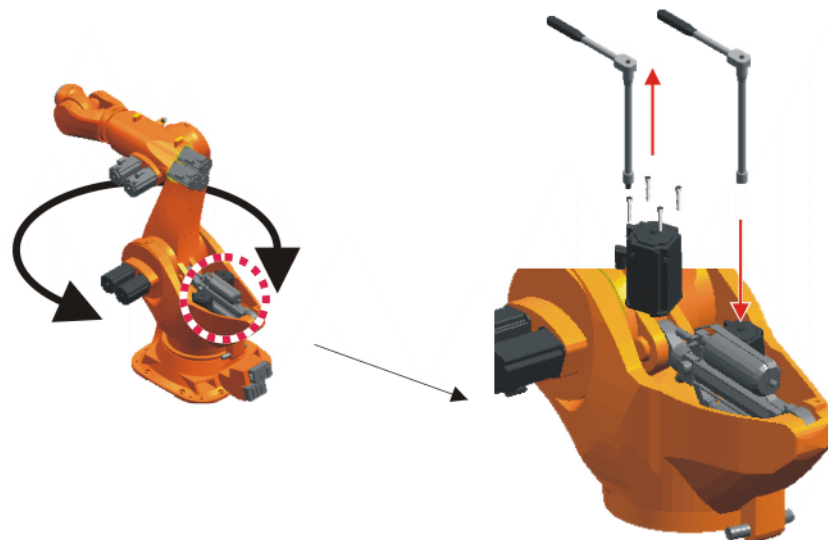


Fig. 5-1: Moving A1

WARNING

Moving an axis with the release device can damage the motor brake. This can result in personal injury and material damage. After using the release device, the motor must be exchanged.

5.4.4.2 Moving A2 with the release device

Required parts Required parts of the release device:

- Torque bracket
- 12 mm hexagon insert
- Drive shaft
- Reversible ratchet
- 24 mm hexagonal socket

Procedure

SAFETY INSTRUCTIONS

The following procedure must be followed exactly!

1. Switch off the robot controller and secure it (e.g. with a padlock) to prevent unauthorized persons from switching it on again.

CAUTION

The motors reach temperatures during operation which can cause burns to the skin. Contact must be avoided. Appropriate safety precautions must be taken, e.g. protective gloves must be worn.

2. Unscrew the motor shaft cover from the left-hand motor of A2.
3. Insert the torque bracket on the left-hand motor.
4. Position the hexagon insert on the motor shaft of the left-hand motor and secure it with the two M6 Allen screws to prevent it from turning.
5. Unscrew the four M12 Allen screws from the right-hand motor.
6. Pull out the motor (weight: approx. 44 kg) and set it down.
7. Fit the drive shaft onto the gear input shaft of the right-hand motor.
8. Fit the ratchet with the 24 mm hexagonal socket onto the drive shaft.
9. Turn A2 using the ratchet. The axis turns in the same direction as the ratchet is turned.

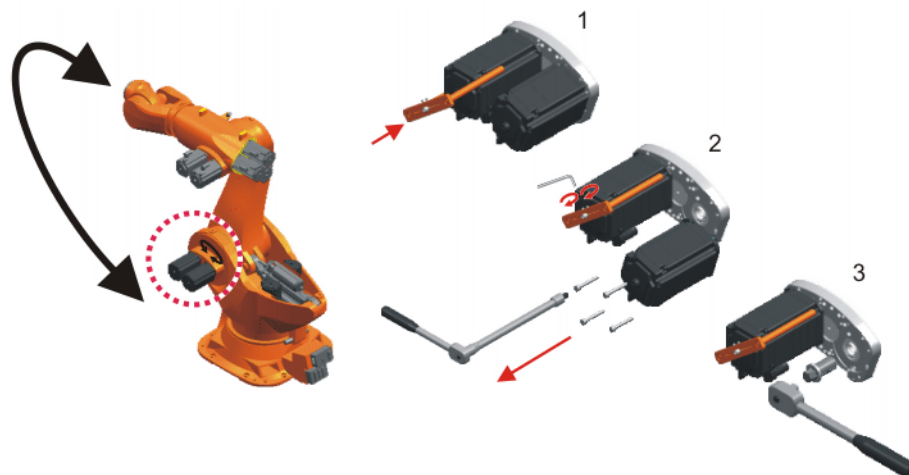


Fig. 5-2: Moving A2

WARNING

Moving an axis with the release device can damage the motor brake. This can result in personal injury and material damage. After using the release device, the motor must be exchanged.

5.4.5 Labeling on the industrial robot

All plates, labels, symbols and marks constitute safety-relevant parts of the industrial robot. They must not be modified or removed.

Labeling on the industrial robot consists of:

- Identification plates
- Warning signs
- Safety symbols
- Designation labels
- Cable markings
- Rating plates



Further information is contained in the technical data of the operating instructions or assembly instructions of the components of the industrial robot.

5.5 Safety measures

5.5.1 General safety measures

The industrial robot may only be used in perfect technical condition in accordance with its intended use and only by safety-conscious persons. Operator errors can result in personal injury and damage to property.

It is important to be prepared for possible movements of the industrial robot even after the robot controller has been switched off and locked out. Incorrect installation (e.g. overload) or mechanical defects (e.g. brake defect) can cause the manipulator or external axes to sag. If work is to be carried out on a switched-off industrial robot, the manipulator and external axes must first be moved into a position in which they are unable to move on their own, whether the payload is mounted or not. If this is not possible, the manipulator and external axes must be secured by appropriate means.



DANGER In the absence of operational safety functions and safeguards, the industrial robot can cause personal injury or material damage. If safety functions or safeguards are dismantled or deactivated, the industrial robot may not be operated.



DANGER Standing underneath the robot arm can cause death or injuries. For this reason, standing underneath the robot arm is prohibited!



CAUTION The motors reach temperatures during operation which can cause burns to the skin. Contact must be avoided. Appropriate safety precautions must be taken, e.g. protective gloves must be worn.

KCP

The user must ensure that the industrial robot is only operated with the KCP by authorized persons.

If more than one KCP is used in the overall system, it must be ensured that each KCP is unambiguously assigned to the corresponding industrial robot. They must not be interchanged.



WARNING The operator must ensure that decoupled KCPs are immediately removed from the system and stored out of sight and reach of personnel working on the industrial robot. This serves to prevent operational and non-operational EMERGENCY STOP devices from becoming interchanged. Failure to observe this precaution may result in death, severe injuries or considerable damage to property.

External keyboard, external mouse	<p>An external keyboard and/or external mouse may only be used if the following conditions are met:</p> <ul style="list-style-type: none"> ■ Start-up or maintenance work is being carried out. ■ The drives are switched off. ■ There are no persons in the danger zone. <p>The KCP must not be used as long as an external keyboard and/or external mouse are connected.</p> <p>The external keyboard and/or external mouse must be removed as soon as the start-up or maintenance work is completed or the KCP is connected.</p>
Modifications	<p>After modifications to the industrial robot, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.</p> <p>New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).</p> <p>After modifications to the industrial robot, existing programs must always be tested first in Manual Reduced Velocity mode (T1). This applies to all components of the industrial robot and includes modifications to the software and configuration settings.</p>
Faults	<p>The following tasks must be carried out in the case of faults in the industrial robot:</p> <ul style="list-style-type: none"> ■ Switch off the robot controller and secure it (e.g. with a padlock) to prevent unauthorized persons from switching it on again. ■ Indicate the fault by means of a label with a corresponding warning (tag-out). ■ Keep a record of the faults. ■ Eliminate the fault and carry out a function test.

5.5.2 Transportation

Manipulator	<p>The prescribed transport position of the manipulator must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot.</p> <p>Avoid vibrations and impacts during transportation in order to prevent damage to the manipulator.</p>
Robot controller	<p>The prescribed transport position of the robot controller must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot controller.</p> <p>Avoid vibrations and impacts during transportation in order to prevent damage to the robot controller.</p>
External axis (optional)	<p>The prescribed transport position of the external axis (e.g. KUKA linear unit, turn-tilt table, positioner) must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the external axis.</p>

5.5.3 Start-up and recommissioning

Before starting up systems and devices for the first time, a check must be carried out to ensure that the systems and devices are complete and operational, that they can be operated safely and that any damage is detected.

The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety circuits must also be tested.



The passwords for logging onto the KUKA System Software as “Expert” and “Administrator” must be changed before start-up and must only be communicated to authorized personnel.



WARNING The robot controller is preconfigured for the specific industrial robot. If cables are interchanged, the manipulator and the external axes (optional) may receive incorrect data and can thus cause personal injury or material damage. If a system consists of more than one manipulator, always connect the connecting cables to the manipulators and their corresponding robot controllers.



If additional components (e.g. cables), which are not part of the scope of supply of KUKA Roboter GmbH, are integrated into the industrial robot, the user is responsible for ensuring that these components do not adversely affect or disable safety functions.

NOTICE

If the internal cabinet temperature of the robot controller differs greatly from the ambient temperature, condensation can form, which may cause damage to the electrical components. Do not put the robot controller into operation until the internal temperature of the cabinet has adjusted to the ambient temperature.

Function test

The following tests must be carried out before start-up and recommissioning:

It must be ensured that:

- The industrial robot is correctly installed and fastened in accordance with the specifications in the documentation.
- There is no damage to the robot that could be attributed to external forces. Example: Dents or abrasion that could be caused by an impact or collision.




WARNING In the case of such damage, the affected components must be exchanged. In particular, the motor and counterbalancing system must be checked carefully. External forces can cause non-visible damage. For example, it can lead to a gradual loss of drive power from the motor, resulting in unintended movements of the manipulator. Death, injuries or considerable damage to property may otherwise result.

- There are no foreign bodies or loose parts on the industrial robot.
- All required safety equipment is correctly installed and operational.
- The power supply ratings of the industrial robot correspond to the local supply voltage and mains type.
- The ground conductor and the equipotential bonding cable are sufficiently rated and correctly connected.
- The connecting cables are correctly connected and the connectors are locked.

Machine data

It must be ensured that the rating plate on the robot controller has the same machine data as those entered in the declaration of incorporation. The machine data on the rating plate of the manipulator and the external axes (optional) must be entered during start-up.

 **WARNING** The industrial robot must not be moved if incorrect machine data are loaded. Death, severe injuries or considerable damage to property may otherwise result. The correct machine data must be loaded.

5.5.4 Manual mode

Manual mode is the mode for setup work. Setup work is all the tasks that have to be carried out on the industrial robot to enable automatic operation. Setup work includes:

- Jog mode
- Teaching
- Programming
- Program verification

The following must be taken into consideration in manual mode:

- If the drives are not required, they must be switched off to prevent the manipulator or the external axes (optional) from being moved unintentionally.
- New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).
- The manipulator, tooling or external axes (optional) must never touch or project beyond the safety fence.
- Workpieces, tooling and other objects must not become jammed as a result of the industrial robot motion, nor must they lead to short-circuits or be liable to fall off.
- All setup work must be carried out, where possible, from outside the safeguarded area.

If the setup work has to be carried out inside the safeguarded area, the following must be taken into consideration:

In **Manual Reduced Velocity mode (T1)**:

- If it can be avoided, there must be no other persons inside the safeguarded area.
If it is necessary for there to be several persons inside the safeguarded area, the following must be observed:
 - Each person must have an enabling device.
 - All persons must have an unimpeded view of the industrial robot.
 - Eye-contact between all persons must be possible at all times.
- The operator must be so positioned that he can see into the danger area and get out of harm's way.

In **Manual High Velocity mode (T2)**:

- This mode may only be used if the application requires a test at a velocity higher than possible in T1 mode.
- Teaching and programming are not permissible in this operating mode.
- Before commencing the test, the operator must ensure that the enabling devices are operational.
- The operator must be positioned outside the danger zone.
- There must be no other persons inside the safeguarded area. It is the responsibility of the operator to ensure this.

5.5.5 Automatic mode

Automatic mode is only permissible in compliance with the following safety measures:

- All safety equipment and safeguards are present and operational.
- There are no persons in the system.
- The defined working procedures are adhered to.

If the manipulator or an external axis (optional) comes to a standstill for no apparent reason, the danger zone must not be entered until an EMERGENCY STOP has been triggered.


5.5.6 Maintenance and repair

After maintenance and repair work, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.

The purpose of maintenance and repair work is to ensure that the system is kept operational or, in the event of a fault, to return the system to an operational state. Repair work includes troubleshooting in addition to the actual repair itself.

The following safety measures must be carried out when working on the industrial robot:

- Carry out work outside the danger zone. If work inside the danger zone is necessary, the user must define additional safety measures to ensure the safe protection of personnel.
- Switch off the industrial robot and secure it (e.g. with a padlock) to prevent it from being switched on again. If it is necessary to carry out work with the robot controller switched on, the user must define additional safety measures to ensure the safe protection of personnel.
- If it is necessary to carry out work with the robot controller switched on, this may only be done in operating mode T1.
- Label the system with a sign indicating that work is in progress. This sign must remain in place, even during temporary interruptions to the work.
- The EMERGENCY STOP devices must remain active. If safety functions or safeguards are deactivated during maintenance or repair work, they must be reactivated immediately after the work is completed.

 **DANGER** Before work is commenced on live parts of the robot system, the main switch must be turned off and secured against being switched on again. The system must then be checked to ensure that it is deenergized. It is not sufficient, before commencing work on live parts, to execute an EMERGENCY STOP or a safety stop, or to switch off the drives, as this does not disconnect the robot system from the mains power supply. Parts remain energized. Death or severe injuries may result.

Faulty components must be replaced using new components with the same article numbers or equivalent components approved by KUKA Roboter GmbH for this purpose.

Cleaning and preventive maintenance work is to be carried out in accordance with the operating instructions.

Robot controller

Even when the robot controller is switched off, parts connected to peripheral devices may still carry voltage. The external power sources must therefore be switched off if work is to be carried out on the robot controller.

The ESD regulations must be adhered to when working on components in the robot controller.

Voltages in excess of 50 V (up to 600 V) can be present in various components for several minutes after the robot controller has been switched off! To prevent life-threatening injuries, no work may be carried out on the industrial robot in this time.

Water and dust must be prevented from entering the robot controller.

Counterbalancing system

Some robot variants are equipped with a hydropneumatic, spring or gas cylinder counterbalancing system.

The hydropneumatic and gas cylinder counterbalancing systems are pressure equipment and, as such, are subject to obligatory equipment monitoring and the provisions of the Pressure Equipment Directive.

The user must comply with the applicable national laws, regulations and standards pertaining to pressure equipment.

Inspection intervals in Germany in accordance with Industrial Safety Order, Sections 14 and 15. Inspection by the user before commissioning at the installation site.

The following safety measures must be carried out when working on the counterbalancing system:

- The manipulator assemblies supported by the counterbalancing systems must be secured.
- Work on the counterbalancing systems must only be carried out by qualified personnel.

Hazardous substances

The following safety measures must be carried out when handling hazardous substances:

- Avoid prolonged and repeated intensive contact with the skin.
- Avoid breathing in oil spray or vapors.
- Clean skin and apply skin cream.



To ensure safe use of our products, we recommend that our customers regularly request up-to-date safety data sheets from the manufacturers of hazardous substances.

5.5.7 Decommissioning, storage and disposal

The industrial robot must be decommissioned, stored and disposed of in accordance with the applicable national laws, regulations and standards.

5.6 Applied norms and regulations

Name	Definition	Edition
2006/42/EC	<p>Machinery Directive:</p> <p>Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast)</p>	2006

2014/30/EU	EMC Directive: Directive 2014/30/EC of the European Parliament and of the Council of 26 February 2014 on the approximation of the laws of the Member States concerning electromagnetic compatibility	2014
2014/68/EC	Pressure Equipment Directive: Directive 2014/68/EC of the European Parliament and of the Council of 15 May 2014 on the approximation of the laws of the Member States concerning pressure equipment (Only applicable for robots with hydropneumatic counterbalancing system.) This directive is valid from the 19/07/2016 on.	2014
97/23/EC	Pressure Equipment Directive: Directive 97/23/EC of the European Parliament and of the Council of 29 May 1997 on the approximation of the laws of the Member States concerning pressure equipment (Only applicable for robots with hydropneumatic counterbalancing system.) This directive is valid until 18/07/2016.	1997
EN ISO 13850	Safety of machinery: Emergency stop - Principles for design	2008
EN ISO 13849-1	Safety of machinery: Safety-related parts of control systems - Part 1: General principles of design	2008
EN ISO 13849-2	Safety of machinery: Safety-related parts of control systems - Part 2: Validation	2012
EN ISO 12100	Safety of machinery: General principles of design, risk assessment and risk reduction	2010
EN ISO 10218-1	Industrial robots – Safety requirements Part 1: Robot Note: Content equivalent to ANSI/RIA R.15.06-2012, Part 1	2011
EN 614-1 + A1	Safety of machinery: Ergonomic design principles - Part 1: Terms and general principles	2009
EN 61000-6-2	Electromagnetic compatibility (EMC): Part 6-2: Generic standards; Immunity for industrial environments	2005

EN 61000-6-4 + A1	Electromagnetic compatibility (EMC): Part 6-4: Generic standards; Emission standard for industrial environments	2011
EN 60204-1 + A1	Safety of machinery: Electrical equipment of machines - Part 1: General requirements	2009

6 Planning

6.1 Information for planning

In the planning and design phase, care must be taken regarding the functions or applications to be executed by the kinematic system. The following conditions can lead to premature wear. They necessitate shorter maintenance intervals and/or earlier exchange of components. In addition, the permissible operating parameters specified in the technical data must be taken into account and observed during planning.

- Continuous operation near temperature limits or in abrasive environments
- Continuous operation close to the performance limits, e.g. high rpm of an axis
- High duty cycle of individual axes
- Monotonous motion profiles, e.g. short, frequently recurring axis motions
- Static axis positions, e.g. continuous vertical position of a wrist axis
- External forces (process forces) acting on the robot

If one or more of these conditions are to apply during operation of the kinematic system, KUKA Roboter GmbH must be consulted.

If the robot reaches its corresponding operation limit or if it is operated near the limit for a period of time, the built-in monitoring functions come into effect and the robot is automatically switched off.

This protective function can limit the availability of the robot system.

6.2 Mounting base with centering

Description The mounting base with centering is used when the robot is fastened to the floor.

The mounting base with centering consists of:

- Bedplate
- Chemical anchors (resin-bonded anchors)
- Fasteners

This mounting variant requires a level and smooth surface on a concrete foundation with adequate load bearing capacity. The concrete foundation must be able to accommodate the forces occurring during operation. There must be no layers of insulation or screed between the bedplate and the concrete foundation.

The minimum dimensions must be observed.

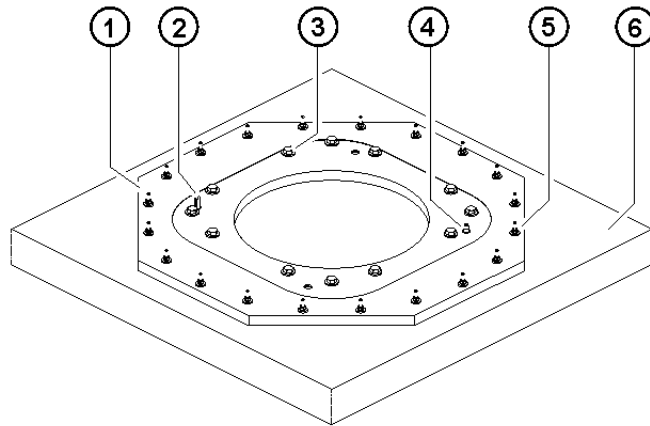


Fig. 6-1: Mounting base

- | | | | |
|---|--------------|---|---------------------------------------|
| 1 | Bedplate | 4 | Pin |
| 2 | Sword pin | 5 | Chemical anchor (resin-bonded anchor) |
| 3 | Hexagon bolt | 6 | Concrete foundation |

Grade of concrete for foundations

When producing foundations from concrete, observe the load-bearing capacity of the ground and the country-specific construction regulations. There must be no layers of insulation or screed between the bedplates and the concrete foundation. The quality of the concrete must meet the requirements of the following standard:

- C20/25 according to DIN EN 206-1:2001/DIN 1045-2:2008

Dimensioned drawing

The following illustration (>>> Fig. 6-2) provides all the necessary information on the mounting base, together with the required foundation data.

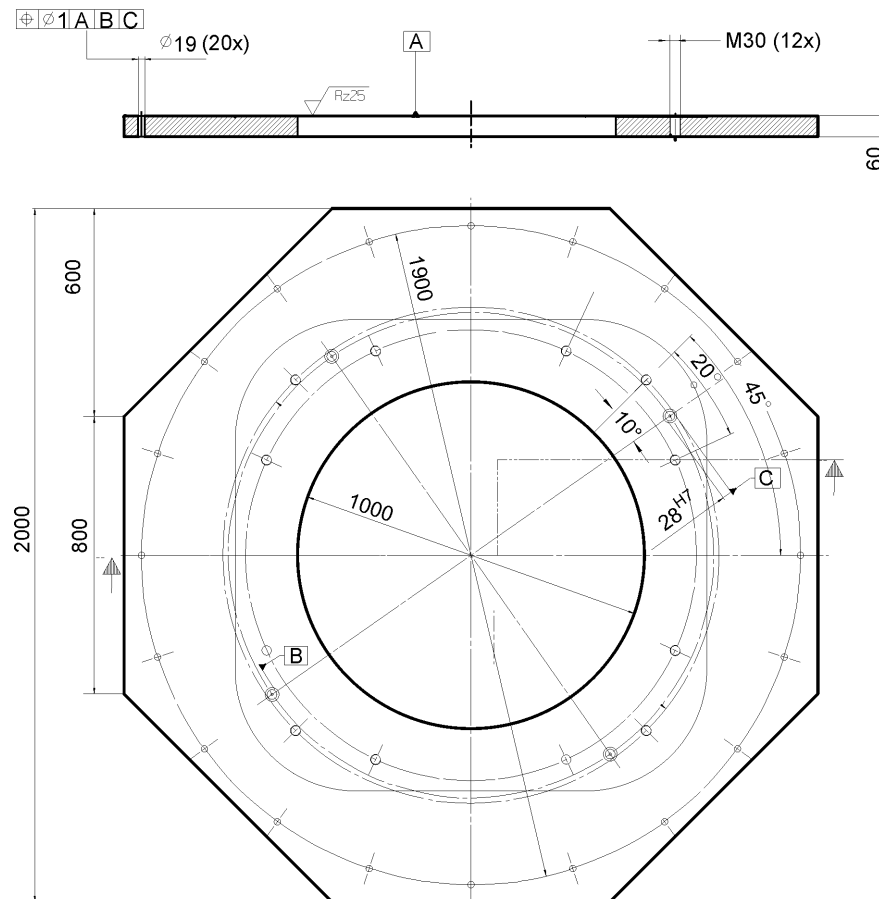


Fig. 6-2: Mounting base with centering, dimensioned drawing

To ensure that the anchor forces are safely transmitted to the foundation, observe the dimensions for concrete foundations specified in the following illustration (>>> Fig. 6-3).

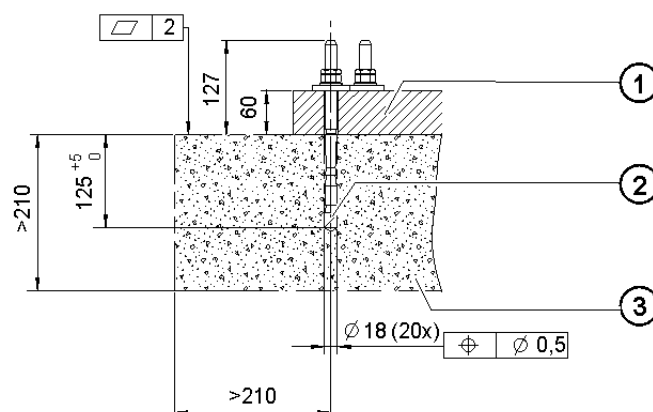


Fig. 6-3: Cross-section of foundations

- 1 Bedplate
- 2 Chemical anchor (resin-bonded anchor)
- 3 Concrete foundation

6.3 Machine frame mounting

Description

The machine frame mounting assembly is used when the robot is fastened on a steel structure, a booster frame (pedestal) or a KUKA linear unit. It must be ensured that the substructure is able to withstand safely the forces occurring during operation (foundation loads). The following diagram contains all the necessary information that must be observed when preparing the mounting surface.

The machine frame mounting assembly consists of:

- Pin with fasteners (>>> Fig. 6-4)
- Sword pin with fasteners
- Hexagon bolts with conical spring washers

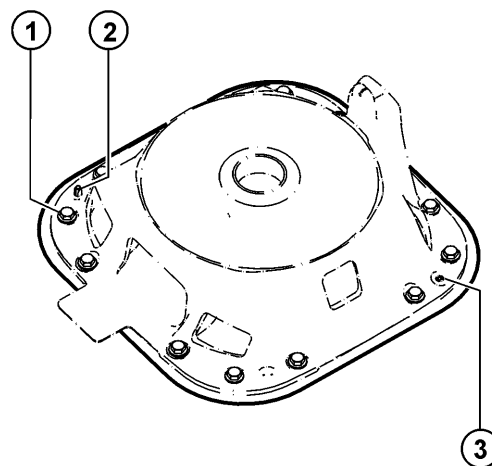


Fig. 6-4: Machine frame mounting

- | | | | |
|---|--------------------|---|-----|
| 1 | Hexagon bolts, 12x | 3 | Pin |
| 2 | Sword pin | | |

Dimensioned drawing

The following illustration (>>> Fig. 6-2) provides all the necessary information on the mounting base, together with the required foundation data.

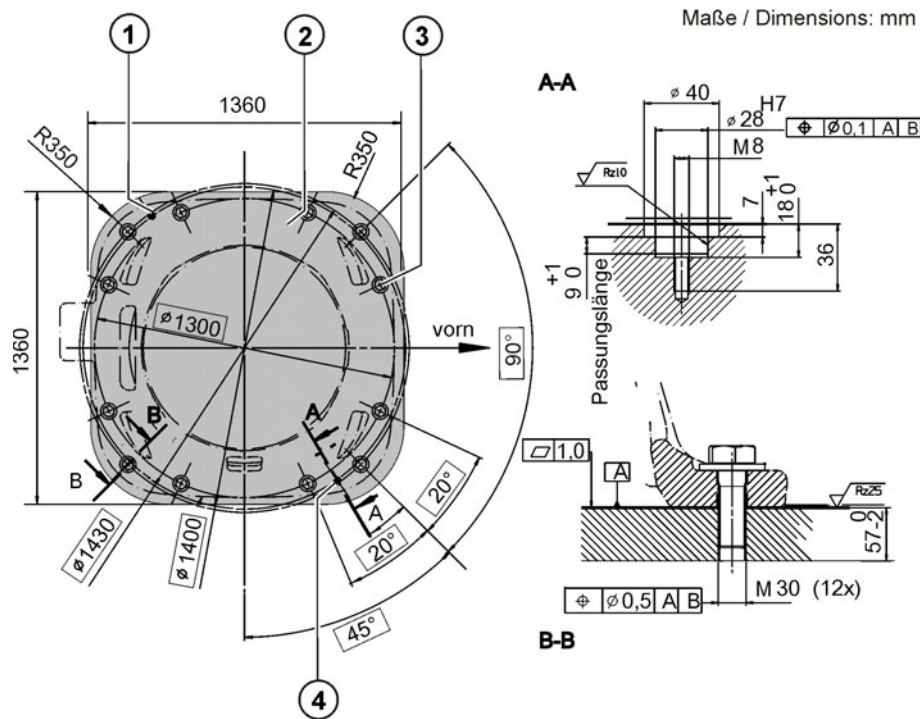


Fig. 6-5: Machine frame mounting, dimensioned drawing

- | | | | |
|---|----------------------------|---|--------------------|
| 1 | Sword pin | 3 | Hexagon bolts, 12x |
| 2 | Mounting surface, machined | 4 | Pin |

6.4 Connecting cables and interfaces

Description

The connecting cables comprise all the cables for transferring energy and signals between the robot and the robot controller. Depending on the specification of the robot, the following connecting cables are used:

- Standard connecting cables
- Connecting cables for RoboTeam robots
- Connecting cables for SafeRobot

Depending on the specification of the robot, various connecting cables are used. Cable lengths of 7 m, 15 m, 25 m, 35 m and 50 m are available. The maximum length of the connecting cables must not exceed 50 m. Thus if the robot is operated on a linear unit which has its own energy supply chain these cables must also be taken into account.

If the length of the connecting cables is greater than 25 m, a 16 mm² ground conductor must be connected between the robot and the control cabinet. An additional ground conductor is always required to provide a low-resistance connection between the robot and the control cabinet in accordance with DIN EN 60204-1. The ground conductors are connected via ring cable lugs. The threaded bolt for connecting the ground conductor is located on the base frame of the robot.

If the robot is equipped with remote junction boxes, the permissible lengths of the connecting cables are limited to 35 m. The cables of the remote RDC box (cable set) must be routed in the same way as the connecting cables.

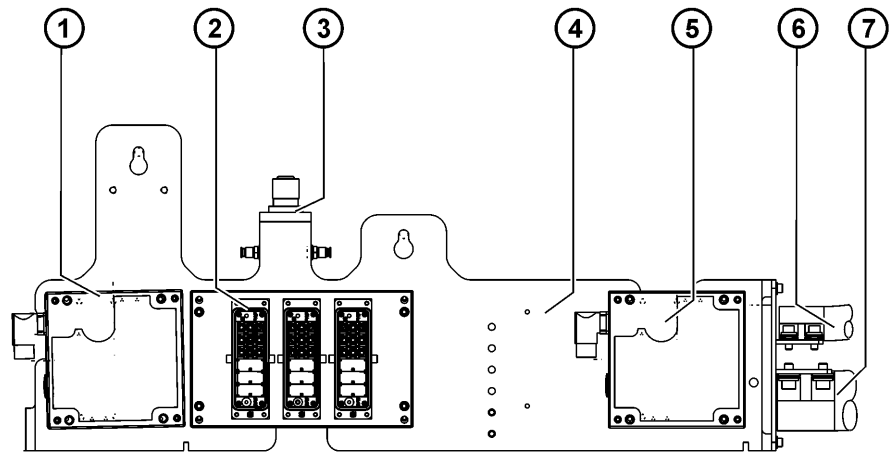


Fig. 6-6: Junction boxes, remote

- | | | | |
|---|--------------------|---|----------------|
| 1 | RDC2 box | 5 | RDC2 box |
| 2 | Motor junction box | 6 | Control cables |
| 3 | Pressure regulator | 7 | Motor cables |
| 4 | Connection plate | | |

The following points must be observed when planning and routing the connecting cables:

- The bending radius for fixed routing must not be less than 150 mm for motor cables and 60 mm for control cables.
- Protect cables against exposure to mechanical stress.
- Route the cables without mechanical stress – no tensile forces on the connectors
- Cables are only to be installed indoors.
- Observe permissible temperature range (fixed installation) of 263 K (-10 °C) to 343 K (+70 °C).
- Route the motor cables and the data cables separately in metal ducts; if necessary, additional measures must be taken to ensure electromagnetic compatibility (EMC).

Interface for energy supply system

The robot can be equipped with an energy supply system between axis 1 and axis 3 and a second energy supply system between axis 3 and axis 6. The A1 interface required for this is located on the rear, the A3 interface is located on the side of the arm and the interface for axis 6 is located on the robot tool. The interfaces are equipped with connections for cables and hoses depending on the application. Detailed information on the connector pin allocation, threaded unions, etc. is given in separate documentation.

7 Transportation

7.1 Transporting the robot

Before transporting the robot, always move the robot into its transport position (>>> Fig. 7-1). It must be ensured that the robot is stable while it is being transported. The robot must remain in its transport position until it has been fastened in position. Before the robot is lifted, it must be ensured that it is free from obstructions. Remove all transport safeguards, such as nails and screws, in advance. First remove any rust or glue on contact surfaces.

If the robot is sent via airfreight, the counterbalancing system must be fully depressurized (both oil and nitrogen) .



A hydropneumatic counterbalancing system is classified as hazardous. For this reason, the applicable national regulations must be observed when shipping. If the robot with built-in counterbalancing system is, for example, shipped via airfreight, country regulations may require that the counterbalancing system be fully depressurized.

Transport position

The robot must be in the transport position (>>> Fig. 7-1) before it can be transported. The robot is in the transport position when the axes are in the following positions:

Axis	A1	A2	A3	A4	A5	A6
Angle ¹⁾	0°	-130°	+130°	0°	+90°	0°
Angle ²⁾	0°	-140°	+140°	0°	+90°	0°

¹⁾ Robot with buffer installed on axis 2

²⁾ Robot without buffer on 2

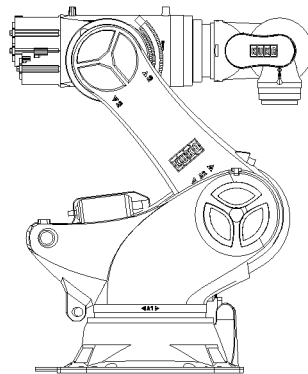


Fig. 7-1: Transport position

Transport dimensions

The transport dimensions (>>> Fig. 7-2) and (>>> Fig. 7-3) for the robot can be noted from the following diagrams. The position of the center of gravity and the weight vary according to the specific configuration and the position of axis 2. The specified dimensions refer to the robot without equipment.

The dimensions with the index ¹⁾ apply for normal transportation. The dimensions with the index ²⁾ are obtained if the buffer on the minus side of axis 2 is removed.

Maße / Dimensions: mm

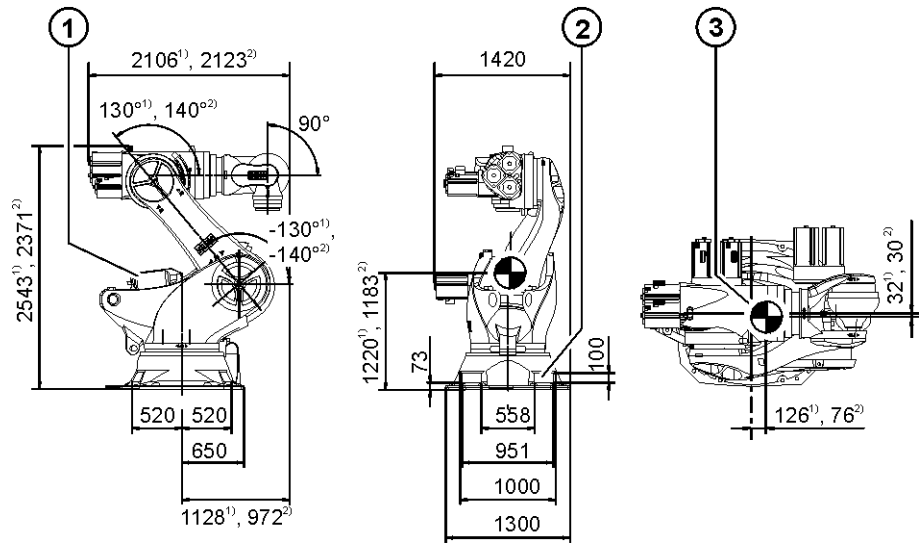


Fig. 7-2: Transport dimensions with in-line wrist IW 1000

- 1 Robot
- 2 Fork slots
- 3 Center of gravity

Maße / Dimensions: mm

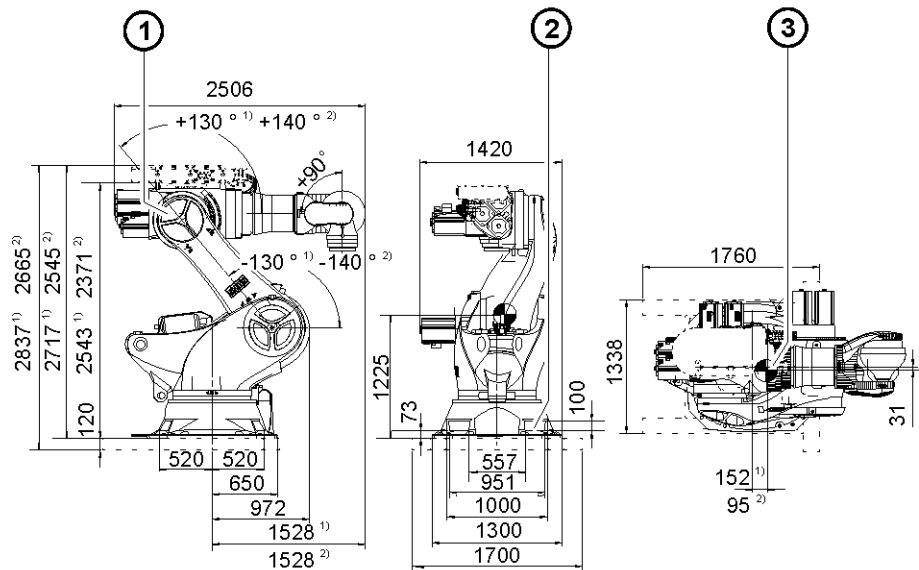


Fig. 7-3: Transport dimensions with in-line wrist IW 750

- 1 Robot
- 2 Fork slots
- 3 Center of gravity

Transportation

The robot can be transported by fork lift truck or using lifting tackle.

⚠ WARNING Use of unsuitable handling equipment may result in damage to the robot or injury to persons. Only use authorized handling equipment with a sufficient load-bearing capacity. Only transport the robot in the manner specified here.

Transportation by fork lift truck

For transport by fork lift truck (>>> Fig. 7-4), cast fork slots are provided in the base frame. The fork lift truck must have a minimum payload capacity of 6 t.

NOTICE Avoid excessive loading of the fork slots through undue inward or outward movement of hydraulically adjustable forks of the fork lift truck. Failure to do so may result in material damage.

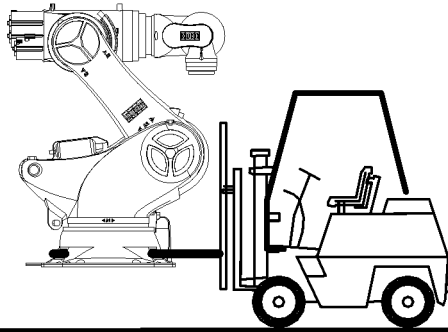


Fig. 7-4: Transportation by fork lift truck

Transportation with lifting tackle

The robot can also be transported using lifting tackle. The robot must be in the transport position. The lifting tackle is attached to 3 eyebolts that are securely screwed into the rotating column. All the legs must be routed as shown in the following illustration so that the robot is not damaged. Installed tools and items of equipment can cause undesirable shifts in the center of gravity. Items of equipment, especially energy supply systems, must be removed to the extent necessary to avoid them being damaged by the legs of the lifting tackle during transportation.

All legs are labeled from "G1" to "G3".

⚠ WARNING The robot may tip during transportation. Risk of personal injury and damage to property. If the robot is being transported using lifting tackle, special care must be exercised to prevent it from tipping. Additional safeguarding measures must be taken. It is forbidden to pick up the robot in any other way using a crane!

If the robot is equipped with remote junction boxes, the robot can also be transported by crane. Minor shifts in the center of gravity are to be expected.

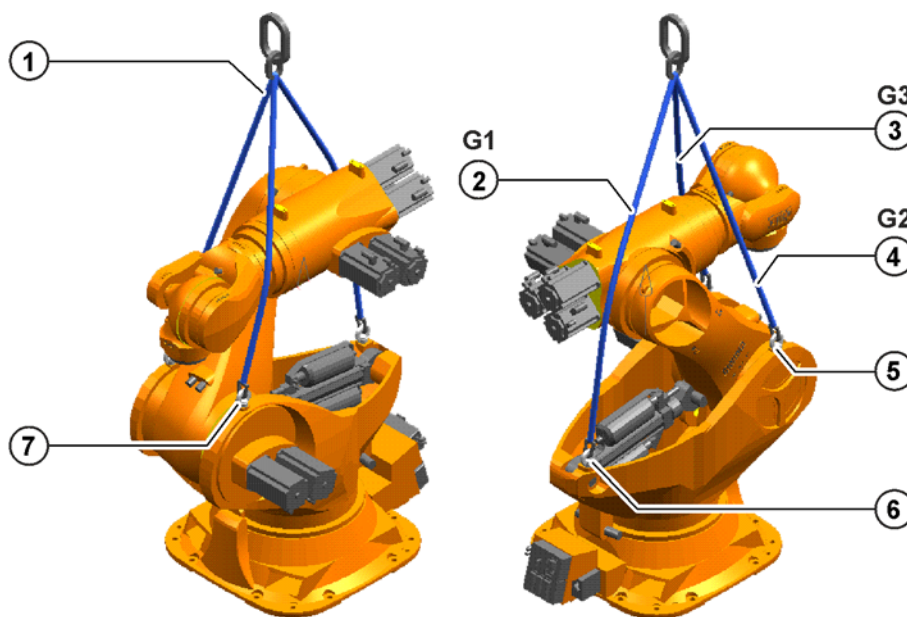


Fig. 7-5: Transportation using lifting tackle

- 1 Lifting tackle assembly
- 2 Leg G1
- 3 Leg G3
- 4 Leg G2
- 5 Eyebolt, rotating column, right
- 6 Eyebolt, rotating column, rear
- 7 Eyebolt, rotating column, left

Transportation with transport frame

If the permitted height for transportation is exceeded in the transport position, the robot can be moved into a different position. To do this, the robot must be secured to the transport frame with all holding-down bolts. Once this has been done, axes 2 and 3 can be moved so as to reduce the overall height (>>> Fig. 7-6) and (>>> Fig. 7-7). The robot can be transported on the transport frame by crane or fork lift truck (minimum payload capacity 8,000 kg). Both robot variants, with transport frame and without equipment, have an overall weight of approx. 5,600 kg.

Before the robot can be transported on the transport frame, the robot axes must be in the following positions:

Axis	A 1	A 2	A 3	A 4	A 5	A 6
Angle	0°	-16°	+145°	0° +25°*	0° +120°*	-90°
* Angle for in-line wrist IW 750						

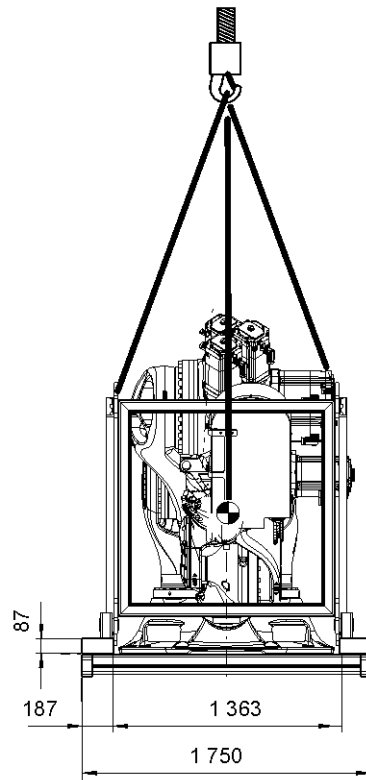
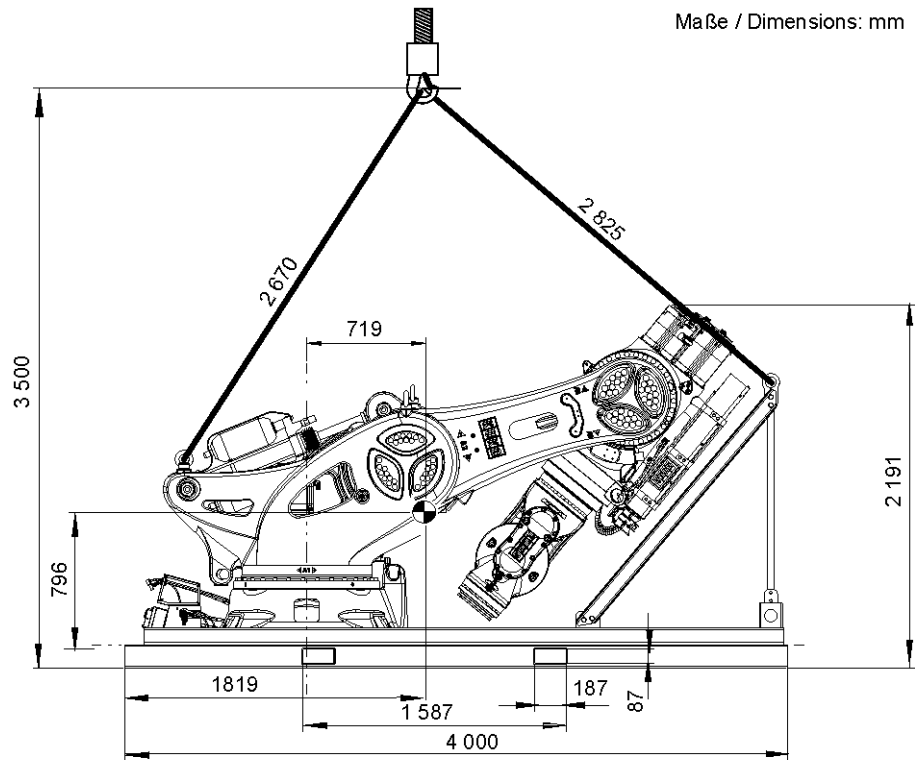


Fig. 7-6: Transport frame for in-line wrist IW 1000

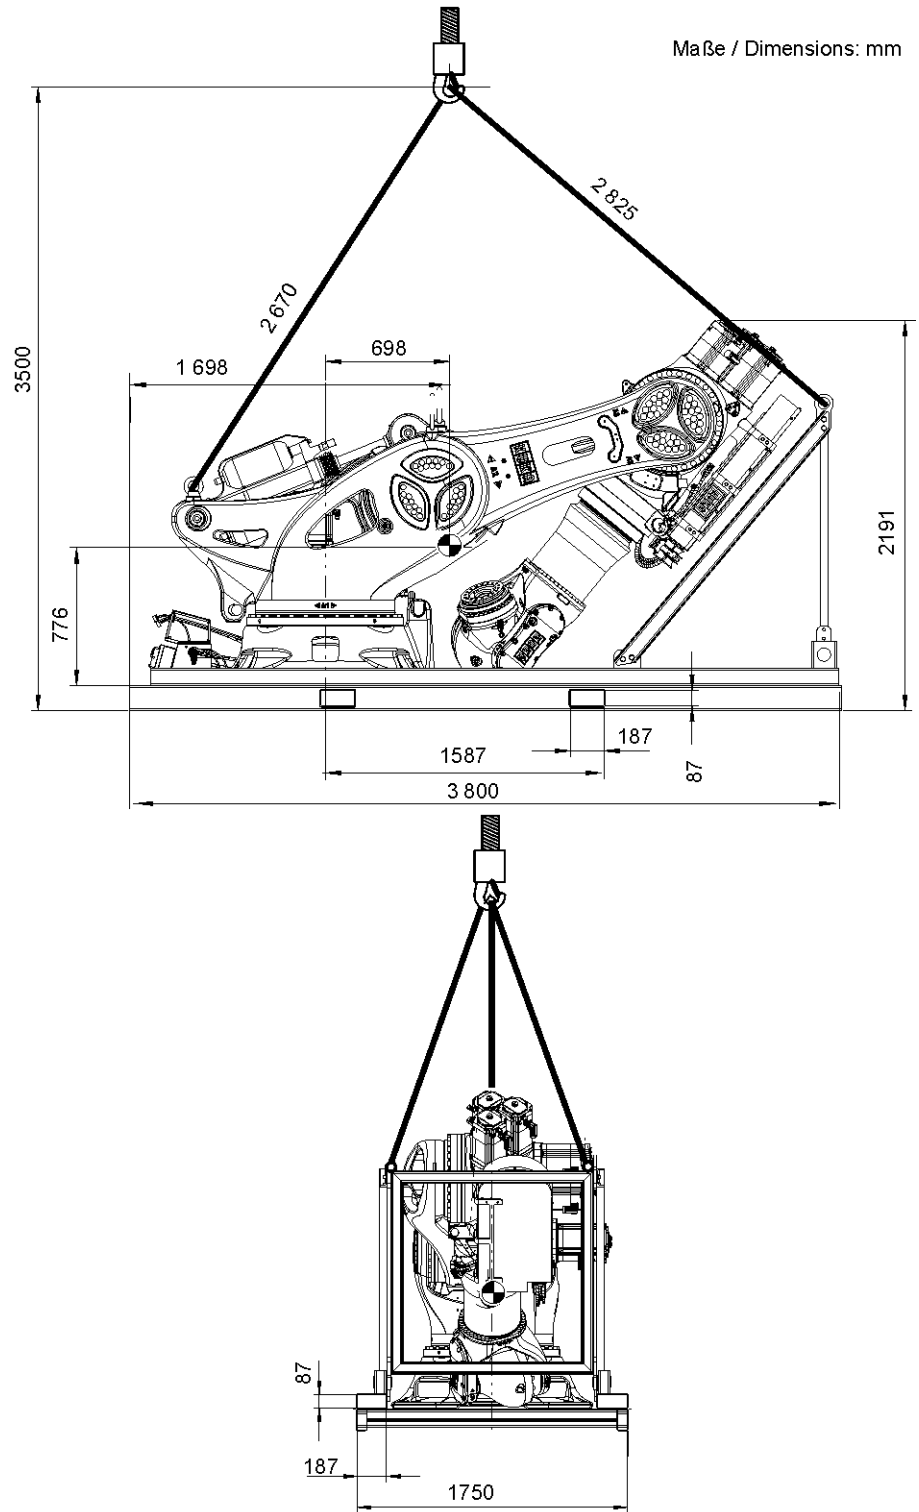


Fig. 7-7: Transport frame for in-line wrist IW 750

8 KUKA Service

8.1 Requesting support

Introduction	This documentation provides information on operation and operator control, and provides assistance with troubleshooting. For further assistance, please contact your local KUKA subsidiary.
Information	<p>The following information is required for processing a support request:</p> <ul style="list-style-type: none"> ■ Description of the problem, including information about the duration and frequency of the fault ■ As comprehensive information as possible about the hardware and software components of the overall system <p>The following list gives an indication of the information which is relevant in many cases:</p> <ul style="list-style-type: none"> ■ Model and serial number of the kinematic system, e.g. the manipulator ■ Model and serial number of the controller ■ Model and serial number of the energy supply system ■ Designation and version of the system software ■ Designations and versions of other software components or modifications ■ Diagnostic package KRCDiag <p>Additionally for KUKA Sunrise: Existing projects including applications For versions of KUKA System Software older than V8: Archive of the software (KRCDiag is not yet available here.)</p> <ul style="list-style-type: none"> ■ Application used ■ External axes used

8.2 KUKA Customer Support

Availability	KUKA Customer Support is available in many countries. Please do not hesitate to contact us if you have any questions.
Argentina	<p>Ruben Costantini S.A. (Agency) Luis Angel Huergo 13 20 Parque Industrial 2400 San Francisco (CBA) Argentina Tel. +54 3564 421033 Fax +54 3564 428877 ventas@costantini-sa.com</p>
Australia	<p>KUKA Robotics Australia Pty Ltd 45 Fennell Street Port Melbourne VIC 3207 Australia Tel. +61 3 9939 9656 info@kuka-robotics.com.au www.kuka-robotics.com.au</p>

Belgium	KUKA Automatisering + Robots N.V. Centrum Zuid 1031 3530 Houthalen Belgium Tel. +32 11 516160 Fax +32 11 526794 info@kuka.be www.kuka.be
Brazil	KUKA Roboter do Brasil Ltda. Travessa Claudio Armando, nº 171 Bloco 5 - Galpões 51/52 Bairro Assunção CEP 09861-7630 São Bernardo do Campo - SP Brazil Tel. +55 11 4942-8299 Fax +55 11 2201-7883 info@kuka-roboter.com.br www.kuka-roboter.com.br
Chile	Robotec S.A. (Agency) Santiago de Chile Chile Tel. +56 2 331-5951 Fax +56 2 331-5952 robotec@robotec.cl www.robotec.cl
China	KUKA Robotics China Co., Ltd. No. 889 Kungang Road Xiaokunshan Town Songjiang District 201614 Shanghai P. R. China Tel. +86 21 5707 2688 Fax +86 21 5707 2603 info@kuka-robotics.cn www.kuka-robotics.com
Germany	KUKA Roboter GmbH Zugspitzstr. 140 86165 Augsburg Germany Tel. +49 821 797-4000 Fax +49 821 797-1616 info@kuka-roboter.de www.kuka-roboter.de

France KUKA Automatismes + Robotique SAS
Techvallée
6, Avenue du Parc
91140 Villebon S/Yvette
France
Tel. +33 1 6931660-0
Fax +33 1 6931660-1
commercial@kuka.fr
www.kuka.fr

India KUKA Robotics India Pvt. Ltd.
Office Number-7, German Centre,
Level 12, Building No. - 9B
DLF Cyber City Phase III
122 002 Gurgaon
Haryana
India
Tel. +91 124 4635774
Fax +91 124 4635773
info@kuka.in
www.kuka.in

Italy KUKA Roboter Italia S.p.A.
Via Pavia 9/a - int.6
10098 Rivoli (TO)
Italy
Tel. +39 011 959-5013
Fax +39 011 959-5141
kuka@kuka.it
www.kuka.it

Japan KUKA Robotics Japan K.K.
YBP Technical Center
134 Godo-cho, Hodogaya-ku
Yokohama, Kanagawa
240 0005
Japan
Tel. +81 45 744 7691
Fax +81 45 744 7696
info@kuka.co.jp

Canada KUKA Robotics Canada Ltd.
6710 Maritz Drive - Unit 4
Mississauga
L5W 0A1
Ontario
Canada
Tel. +1 905 670-8600
Fax +1 905 670-8604
info@kukarobotics.com
www.kuka-robotics.com/canada

Korea	KUKA Robotics Korea Co. Ltd. RIT Center 306, Gyeonggi Technopark 1271-11 Sa 3-dong, Sangnok-gu Ansan City, Gyeonggi Do 426-901 Korea Tel. +82 31 501-1451 Fax +82 31 501-1461 info@kukakorea.com
Malaysia	KUKA Robot Automation (M) Sdn Bhd South East Asia Regional Office No. 7, Jalan TPP 6/6 Taman Perindustrian Puchong 47100 Puchong Selangor Malaysia Tel. +60 (03) 8063-1792 Fax +60 (03) 8060-7386 info@kuka.com.my
Mexico	KUKA de México S. de R.L. de C.V. Progreso #8 Col. Centro Industrial Puente de Vigas Tlalnepantla de Baz 54020 Estado de México Mexico Tel. +52 55 5203-8407 Fax +52 55 5203-8148 info@kuka.com.mx www.kuka-robotics.com/mexico
Norway	KUKA Sveiseanlegg + Roboter Sentrumsvegen 5 2867 Hov Norway Tel. +47 61 18 91 30 Fax +47 61 18 62 00 info@kuka.no
Austria	KUKA Roboter CEE GmbH Gruberstraße 2-4 4020 Linz Austria Tel. +43 7 32 78 47 52 Fax +43 7 32 79 38 80 office@kuka-roboter.at www.kuka.at

Poland KUKA Roboter Austria GmbH
Spółka z ograniczoną odpowiedzialnością
Oddział w Polsce
Ul. Porcelanowa 10
40-246 Katowice
Poland
Tel. +48 327 30 32 13 or -14
Fax +48 327 30 32 26
ServicePL@kuka-roboter.de

Portugal KUKA Robots IBÉRICA, S.A.
Rua do Alto da Guerra n° 50
Armazém 04
2910 011 Setúbal
Portugal
Tel. +351 265 729 780
Fax +351 265 729 782
info.portugal@kukapt.com
www.kuka.com

Russia KUKA Robotics RUS
Werbnaja ul. 8A
107143 Moskau
Russia
Tel. +7 495 781-31-20
Fax +7 495 781-31-19
info@kuka-robotics.ru
www.kuka-robotics.ru

Sweden KUKA Svetsanläggningar + Robotar AB
A. Odhners gata 15
421 30 Västra Frölunda
Sweden
Tel. +46 31 7266-200
Fax +46 31 7266-201
info@kuka.se

Switzerland KUKA Roboter Schweiz AG
Industriestr. 9
5432 Neuenhof
Switzerland
Tel. +41 44 74490-90
Fax +41 44 74490-91
info@kuka-roboter.ch
www.kuka-roboter.ch

Spain	KUKA Robots IBÉRICA, S.A. Pol. Industrial Torrent de la Pastera Carrer del Bages s/n 08800 Vilanova i la Geltrú (Barcelona) Spain Tel. +34 93 8142-353 Fax +34 93 8142-950 comercial@kukarob.es www.kuka.es
South Africa	Jendamark Automation LTD (Agency) 76a York Road North End 6000 Port Elizabeth South Africa Tel. +27 41 391 4700 Fax +27 41 373 3869 www.jendamark.co.za
Taiwan	KUKA Robot Automation Taiwan Co., Ltd. No. 249 Pujong Road Jungli City, Taoyuan County 320 Taiwan, R. O. C. Tel. +886 3 4331988 Fax +886 3 4331948 info@kuka.com.tw www.kuka.com.tw
Thailand	KUKA Robot Automation (M)SdnBhd Thailand Office c/o Maccall System Co. Ltd. 49/9-10 Soi Kingkaew 30 Kingkaew Road Tt. Rachatheva, A. Bangpli Samutprakarn 10540 Thailand Tel. +66 2 7502737 Fax +66 2 6612355 atika@ji-net.com www.kuka-roboter.de
Czech Republic	KUKA Roboter Austria GmbH Organisation Tschechien und Slowakei Sezemická 2757/2 193 00 Praha Horní Počernice Czech Republic Tel. +420 22 62 12 27 2 Fax +420 22 62 12 27 0 support@kuka.cz

Hungary KUKA Robotics Hungaria Kft.
Fö út 140
2335 Taksony
Hungary
Tel. +36 24 501609
Fax +36 24 477031
info@kuka-robotics.hu

USA KUKA Robotics Corporation
51870 Shelby Parkway
Shelby Township
48315-1787
Michigan
USA
Tel. +1 866 873-5852
Fax +1 866 329-5852
info@kukarobotics.com
www.kukarobotics.com

UK KUKA Robotics UK Ltd
Great Western Street
Wednesbury West Midlands
WS10 7LL
UK
Tel. +44 121 505 9970
Fax +44 121 505 6589
service@kuka-robotics.co.uk
www.kuka-robotics.co.uk

Index

Numbers

2006/42/EC 55
 2014/30/EU 56
 2014/68/EC 56
 95/16/EC 55
 97/23/EC 56

A

Accessories 9, 43
 Ambient temperature, operation 14, 16
 Ambient temperature, operation, Safe RDC 14, 16
 Ambient temperature, start-up 14, 16
 Ambient temperature, storage 14, 16
 Ambient temperature, transportation 14, 16
 Angle of rotation 31
 ANSI/RIA R.15.06-2012 56
 Applied norms and regulations 55
 Arm 9, 10
 Automatic mode 54
 Axis data 17
 Axis range 45
 Axis range limitation 47
 Axis range monitoring 47

B

Base frame 9, 11
 Basic data 13, 15
 Brake defect 50
 Braking distance 45

C

CE mark 44
 Center of gravity 65
 Cleaning work 54
 Connecting cables 9, 14, 16, 43, 63
 Counterbalancing system 9, 11, 55

D

Danger zone 45
 Declaration of conformity 44
 Declaration of incorporation 43, 44
 Decommissioning 55
 Dimensions, transport 65
 Disposal 55
 Documentation, industrial robot 5

E

EC declaration of conformity 44
 Electrical installations 9
 Electromagnetic compatibility (EMC) 56, 57
 EMC Directive 44, 56
 EN 60204-1 + A1 57
 EN 61000-6-2 56
 EN 61000-6-4 + A1 57
 EN 614-1 + A1 56
 EN ISO 10218-1 56
 EN ISO 12100 56

EN ISO 13849-1 56
 EN ISO 13849-2 56
 EN ISO 13850 56
 Extension 31
 External axes 43, 45

F

Faults 51
 Fork lift truck 66
 Foundry robots 13, 15
 Foundry version, arm 10
 Foundry version, in-line wrist 10
 Foundry, equipment 13, 15
 Function test 52

G

General information 30
 General safety measures 50

H

Handling equipment 67
 Hazardous substances 55
 Humidity rating 14, 16
 Hydropneumatic 11

I

In-line wrist 9, 10
 Industrial robot 9, 43
 Intended use 44
 Interfaces 63
 Introduction 5

K

KCP 31, 45, 50
 Keyboard, external 51
 KUKA Customer Support 71

L

Labeling 49
 Liability 43
 Lifting gear 67
 Lifting tackle 66, 67
 Linear unit 43
 Link arm 9, 10
 Loads acting on the mounting base 26
 Low Voltage Directive 44

M

Machine data 52
 Machine frame mounting 62
 Machinery Directive 44, 55
 main axes 30
 Maintenance 54
 Manipulator 9, 43, 45
 Manual mode 53
 Mechanical axis range limitation 47
 Mechanical end stops 47
 Mounting base with centering 59

Mounting flange 10, 21, 24
Mouse, external 51

O

Operator 45, 46
Options 9, 11, 43
Overload 50
Overview of the industrial robot 9

P

Payload diagram 20, 23
Payloads 20, 23
Personnel 45
Pin 62
Planning 59
Plant integrator 45
Plates and labels 27
Positioner 43
Pressure Equipment Directive 55, 56
Pressure regulator 10, 13, 15
Preventive maintenance work 54
Principal components 9
Product description 9
Program override, motion velocity 31
Protective equipment, overview 47
Purpose 7

R

Reaction distance 45
Recommissioning 51
Relative air humidity 14, 16
Release device 48
Repair 54
Robot controller 9, 43
Rotating column 9, 10

S

Safety 43
Safety instructions 5
Safety of machinery 56, 57
Safety zone 45, 46
Safety, general 43
Service life 45
Service, KUKA Roboter GmbH 71
smartPAD 31
Software 9, 43
Start-up 51
STOP 0 31, 45
STOP 1 31, 45
STOP 2 45
Stop category 0 45
Stop category 1 45
Stop category 2 45
Stop signal 30
Stopping distance 30, 45
Stopping distances 30
Stopping distances, KR 1000 L750 titan 37
Stopping distances, KR 1000 titan 32
Stopping time 30
Stopping times 30
Stopping times, KR 1000 L750 titan 37

Stopping times, KR 1000 titan 32
Storage 55
Supplementary load 22, 25
Support request 71
Sword pin 62
System integrator 44, 45, 46

T

T1 45
T2 45
Teach pendant 9, 43
Technical data 13
Terms used 31
Terms used, safety 45
Training 7
Transport dimensions 14, 16
Transport frame 14, 16, 68
Transport position 65
Transportation 51, 65
Transportation with lifting tackle 67
Turn-tilt table 43

U

Use, contrary to intended use 43
Use, improper 43
User 45, 46
Users 7

W

Warnings 5
Working envelope 18
Working range limitation 47
Workspace 45, 46

